



4 -Post Alignment Lift


SM40-47/51, SM40NB-47

SM40LT-47, SM55LT-51


SM65-55MB, SM35LT-51MB

SM65-51/55/60, MOT65-55/60


SM40-47-BMW, MOT40NB-47

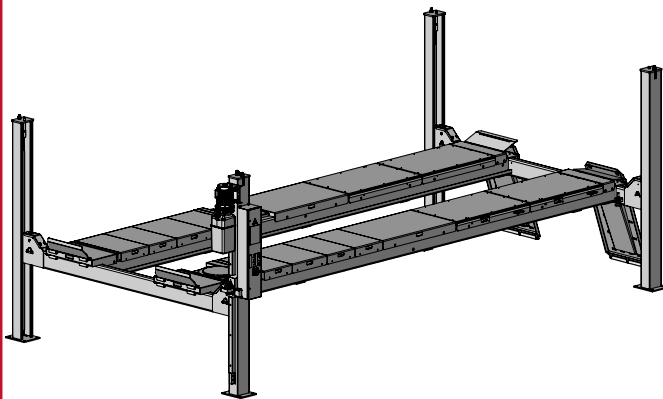


SM65-51/55/60

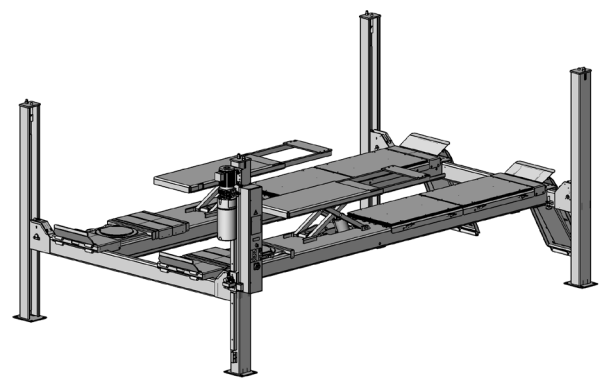

SM55LT-51

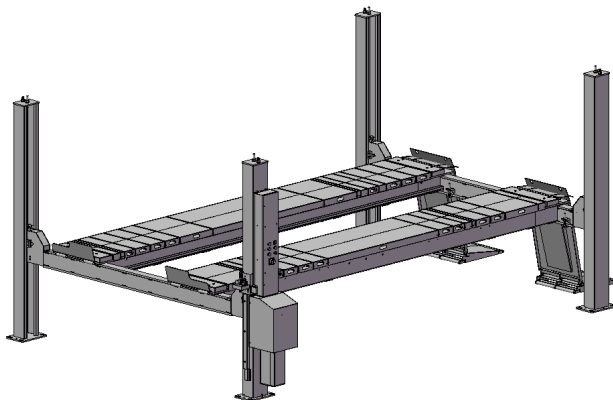

SM40-47-BMW

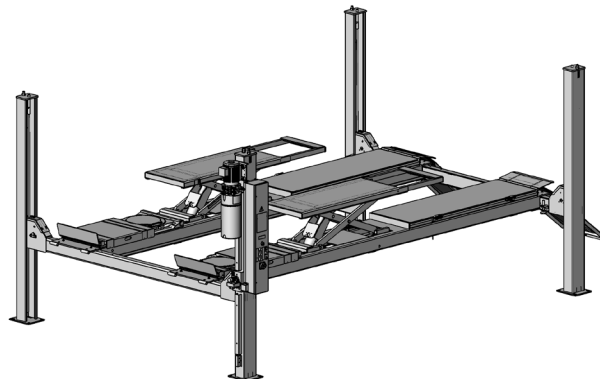

SM40LT-47

Installer: Please return this booklet to literature package and give to lift owner/operator.

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM65-55

Tragfähigkeit 6500 kg / capacity 6500 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture: 20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery – Emergency stop

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:

Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen

Datum / Date: 16.06.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM55LT-51

Tragfähigkeit 5500 kg / capacity 5500 kg

Integrierter Radfreiheber / Integrated wheel free system
Tragfähigkeit 3500 kg / capacity 3500 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture: 20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery – Emergency stop

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:

Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen

Datum / Date: 16.06.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM65-51

Tragfähigkeit 6500 kg / capacity 6500 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture: 20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery – Emergency stop


Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:

Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen

Datum / Date: 16.06.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM40LT-47

Tragfähigkeit 4000 kg / capacity 4000 kg

Integrierter Radfreiheber / Integrated wheel free system
Tragfähigkeit 3000 kg / capacity 3000 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture: 20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery – Emergency stop

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:

Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen

Datum / Date: 16.06.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM40-47

Tragfähigkeit 4000 kg / capacity 4000 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture:

20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery - Emergency stop

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:
Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen
Datum / Date: 16.06.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination: 4-Säulen-Hebebühne / 4-post vehicle lift

Serien- / Typenbezeichnung / model / type:

SM65-55-MB

Tragfähigkeit 6500 kg / capacity 6500 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture:

20...

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
Die Maschine entspricht zusätzlich den Bestimmungen der Richtlinien 2014/30/EU über elektromagnetische Verträglichkeit und 2014/35/EG über elektrische Betriebsmittel (Schutzziele wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten).
is complying with all essential requirements of the Machinery Directive 2006/42/EC.
In addition the machinery is in conformity with the EC Directives 2014/30/EC relating to electromagnetic compatibility and 2014/35/EC relating to electrical equipment (Protection objectives have been met in accordance with Annex I No. 1.5.1 of the Machinery Directive 2006/42/EC).


Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006/2010	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines
EN 349:1993+A1:2008	Sicherheit von Maschinen-Mindestabstände / Safety of machinery - Minimum gaps
EN ISO 13850:2015	Sicherheit von Maschinen-Not-Halt / Safety of machinery - Emergency stop

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen:

The person authorised to compile the relevant technical documentation:
Herr Pohl; Hüfinger Str. 55; 78199 Bräunlingen

Ort / Place: Bräunlingen
Datum / Date: 28.04.2017


Frank Scherer
Geschäftsführer / Managing Director

EG-Konformitätserklärung EC Declaration of Conformity

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to EC directive 2006/42/EC on machinery (Annex II A)

Name und Anschrift des Herstellers
Name and address of the manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Name und Anschrift seines in der EU
niedergelassenen Bevollmächtigten
his authorised representative in EU

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen, Germany

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird.
This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user. The declaration is no more valid, if the product is modified without agreement.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine
Herewith we declare, that the machinery described below

Produktbezeichnung / product denomination:
Serien- / Typenbezeichnung / model / type:

4-Säulen-Hebebühne / 4-post vehicle lift
SM40-47 BMW
Tragfähigkeit 4000 kg / capacity 4000 kg

Maschinen-/Seriennummer / machinery / serial number:

Baujahr / Year of manufacture:

20....

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG entspricht.
is complying with all essential requirements of the Machinery Directive 2006/42/EC.

Angewandte harmonisierte Normen / Harmonised Standards used

EN 1493: 2010	Fahrzeug-Hebebühnen / Vehicle lifts
EN ISO 12100:2010	Sicherheit von Maschinen - Grundbegriffe / Safety of Machinery- Basic concepts
EN 60204-1:2006+A1:2009	Elektrische Ausrüstung von Maschinen / Electrical equipment of machines

Alle Hebebühnen des Typs von oben genanntem Hersteller gefertigt nach dem geprüften Baumauser / All lifts of the same model manufactured by the named company in accordance with the tested type of lift.

Gemäß Anhang IX von 2006/42/EG / According to Annex IX of 2006/42/EC:

Ein Muster dieser Maschine wurde der benannten Stelle Nr. 2140 vorgelegt. / A sample of this machinery has been presented to Notified Body number 2140.

DEKRA Testing and Certification GmbH, Enderstraße 92 b, 01277 Dresden, Germany.

Die EG-Baumusterprüfung wurde am 3. Dezember 2013 mit der Bescheinigung Nr. 4812003.13002 erteilt. / The EC type-examination was issued on December 3, 2013 with certificate Number 4812003.13002.
Die Ausrüstung, für die diese Erklärung vorliegt, entspricht dem Beispiel, auf das sich diese Bescheinigung bezieht, so dass die Bescheinigung weiterhin gültig ist. / The equipment in respect of which this declaration is made conforms to the example to which that certificate relates, so that the certificate remains valid.

Ort / Place: Bräunlingen
Datum / Date: 28.04.2017

Authorized Signature:
Title of signatory:


Frank Scherer
Geschäftsführer / Managing Director

EC Declaration of Conformity

Pursuant to EC Directive 2006/42/EC on Machinery (Annex II A)

Name and address of manufacturer:

BlitzRotary GmbH
Hüfinger Str.55
78199 Bräunlingen,
Deutschland

This declaration relates solely to the machine as configured when launched onto the commercial market; parts which have been added by the end user and/or modifications made following purchase remain unaffected. Unauthorised modifications or changes to this machine invalidate this Declaration.

We hereby declare that the machine described below,

Product designation:

4-post lift

Series/type designation:

SM35LT-51-MB

Load capacity 3500 kg

Integrated wheel free system

Load capacity 3500 kg

Machine/serial number:

Year of manufacture:

20...

complies with all key provisions of Machinery Directive 2006/42/EC.

Furthermore, the machine complies with the provisions of the Electromagnetic Compatibility Directive 2014/30/EC and the Low Voltage Directive 2014/35/EC (safety standards have been met pursuant to Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC).

Related harmonized standards:


EN 1493: 2010	Vehicle lifts
EN ISO 12100:2010	Safety of machinery – basic concepts
EN 60204-1:2006+A1:2009/2010	Electrical equipment of machines
EN 349:1993+A1:2008	Safety of machinery –Minimum distances
EN ISO 13850:2015	Safety of machinery – emergency stops

Name of person authorized to compile the technical documentation:

Mr. Pohl, Hüfinger Str. 55, 78199 Bräunlingen, Germany.

Place, date:

Bräunlingen, 06/16/2017


Frank Scherer / Managing Director

EC Declaration of Conformity

Pursuant to EC Directive 2006/42/EC on Machinery (Annex II A)

Name and address of manufacturer
BlitzRotary GmbH
Hüfnger Str.55
78199 Bräunlingen,
Germany

This declaration relates solely to the machine as configured when launched onto the commercial market; parts which have been added by the end user and/or modifications made following purchase remain unaffected. Unauthorized modifications or changes to this machine invalidate this Declaration.

We hereby declare that the machine described below,

Product designation: 4-post lift
Series/type designation: SM65-60N-MOT
SM65-55N-MOT
SM65-51N-MOT
SM65-60N
SM65-55N
SM65-51N
SM65-55-MB
Load capacity 6500 kg

Machine/serial number:

Year of manufacture: 20...

complies with all key provisions of Machinery Directive 2006/42/EC.

Furthermore, the machine complies with the provisions of the Electromagnetic Compatibility Directive 2014/30/EC and the Low Voltage Directive 2014/35/EC (safety standards have been met pursuant to Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC).

Related harmonized standards:

EN 1493: 2010 Vehicle lifts
EN ISO 12100:2010 Safety of machinery – basic concepts
EN 60204-1:2006+A1:2009/2010 Electrical equipment of machines
EN 349:1993+A1:2008 Safety of machinery –Minimum distances
EN ISO 13850:2015 Safety of machinery – emergency stops

Name of person authorized to compile the technical documentation:

Mr. Pohl, Hüfnger Str. 55, 78199 Bräunlingen, Germany.

Place, date:
Bräunlingen, 06/16/2017

Frank Scherer / Managing Director

EC Declaration of Conformity

Pursuant to EC Directive 2006/42/EC on Machinery (Annex II A)

Name and address of manufacturer:
BlitzRotary GmbH
Hüfnger Str.55
78199 Bräunlingen,
Germany

This declaration relates solely to the machine as configured when launched onto the commercial market; parts which have been added by the end user and/or modifications made following purchase remain unaffected. Unauthorized modifications or changes to this machine invalidate this Declaration.

We hereby declare that the machine described below,

Product designation: 4-post lift
Series/type designation: SM40NB-47N-MOT
SM40-51N-MOT
SM40-47N
SM40NB-47N
SM40-51N
Load capacity 4000 kg

Machine/serial number:

Year of manufacture: 20...

complies with all key provisions of Machinery Directive 2006/42/EC.

Furthermore, the machine complies with the provisions of the Electromagnetic Compatibility Directive 2014/30/EC and the Low Voltage Directive 2014/35/EC (safety standards have been met pursuant to Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC).

Related harmonized standards:

EN 1493: 2010 Vehicle lifts
EN ISO 12100:2010 Safety of machinery – basic concepts
EN 60204-1:2006+A1:2009/2010 Electrical equipment of machines
EN 349:1993+A1:2008 Safety of machinery –Minimum distances
EN ISO 13850:2015 Safety of machinery – emergency stops

Name of person authorized to compile the technical documentation:

Mr. Pohl, Hüfnger Str. 55, 78199 Bräunlingen, Germany.

Place, date:
Bräunlingen, 06/16/2017

Frank Scherer / Managing Director

Table of Contents

1. Introduction	5	6. Authorized lowering	27
1.1 About this operating manual	5	6.1 Manually lowering the lift when there is a height difference of > 50 mm	27
1.2 Warning and information symbols	5	6.2 Leveling the rolling jacks	28
1.3 Intended use	7	6.3 Emergency manual function	28
1.4 Incorrect use, incorrect behavior	7	7. Technical data	30
1.5 Internal accident, health and safety, and environmental information	7	8. Cleaning	33
2. Safety	8	9. Maintenance and repair	34
2.1 Operators	8	9.1 Qualification of maintenance and repair staff	34
2.2 Basic safety requirements	8	9.2 Maintenance and repair safety regulations	34
2.3 Permitted axle loads and weight distribution	9	9.3 Maintenance work	35
2.4 Ban on unauthorized modifications or alterations	10	9.4 Approved hydraulic oils	38
2.5 Experts, competent persons	10	9.5 Check, refill, change the hydraulic oil	39
2.6 Maintenance contractors, installation staff	10	9.6 Repair work (Repairs)	40
2.7 Safety inspections by competent persons	11	10. Transport, Storage	43
3. The 4-Post Lift	12	10.1 Transport	43
3.1 Overview of parts	12	10.2 Offloading	43
3.2 General workflow	13	10.3 Storage	43
3.3 Work area, danger zones	14	11. Assembly	44
3.4 Safety mechanisms	14	11.1 Assembly safety instructions	44
3.5 Control unit	18	11.2 Quick assembly instructions	44
4. Operation	19	11.3 Site specifications	45
4.1 Emergency stop	19	11.4 Installation preparations	45
4.2 Switch the machine on	19	11.5 Prepare the runways	46
4.3 Determine the vehicle data	19	11.6 Prepare the cross beams	46
4.4 Driving on	20	11.7 Set up the cables	47
4.5 Lifting/lowering	20	11.8 Fasten the runways to the cross beams	47
4.6 Drive off	21	11.9 Assemble the lift column	48
4.7 Switch the machine off	21	11.10 Attach the latch bars and cables	49
5. Problems, causes, actions	22	11.11 Attach the flexible hose	50
5.1 Troubleshooting by the operator	22	11.12 Assemble the hydraulics module	50
5.2 Troubleshooting by authorized maintenance contractors	24	11.13 Assemble the pneumatic compents	52

12. Electrical connections52

12.1 Safety instructions for connecting power cables52

12.2 Connect the lift power supply53

13. Commissioning54

13.1 Test the pneumatic and hydraulic system54

13.2 Test the safety mechanism54

13.3 Align the lifting table55

13.4 Leveling the main lift.....55

14. Wheel alignment kit AK/FK/CK (optional) ...57

14.1 Supplied parts57

14.2 Assembly57

14.3 Adjustment work60

15. Disassembly61

16. Disposal62

16.1 Environmental procedures for disposal62

16.2 Packaging62

16.3 Oils, grease, and other chemical substances62

16.4 Metals / Electronic waste62

ANNEX

- SM40, SM40NB,MOT40NB-47,SM40LT ,SM65,SM55LT,SM35LT-51MB,MOT65-55/60,SM40-47-BMW:
Pneumatic circuit diagram, wiring diagrams, hydraulic circuit diagram, spare parts lists
- Protocol of installation
- Completion certificate
- Maintenance schedule: Instructions for conducting visual inspections and function testing
- Inspection log
- Master sheet for vehicle lift
- Test report

1.Introduction

1.1 About this operating manual

The post lift conforms to state of the art technology and complies with the applicable occupational health & safety and accident prevention regulations. Notwithstanding, improper use or use other than that which is intended may result in a risk of fatal or physical injury to the user or third parties and may also result in damage to property.

It is therefore imperative that the relevant people carefully read and understand this operating manual. Read the instructions carefully to prevent incorrect use, potential hazards and damage. The post lift should always be operated according to regulations.

Please note the following:

- The operating manual must be kept near the lift and be easily accessible for all users.
- This operating manual provides information on the post lifts SM40-47/51, SM40NB-47, MOT40NB-47, SM65-51/55/60, MOT65-60, SM40-47-BMW, SM65-51/55MB, SM55LT-51, SM35LT-51MB, SM40LT-47, variant with lifting table..
- **Make sure that you have read and understood Chapter 2, Safety and also the operating instructions supplied with the machine.**
- We assume no liability for damage and operational breakdowns which may occur as a result of non-compliance with the instructions contained within this operating manual.
- Installation and commissioning of the lifts is described in detail in Chapters 11 to 13. Installation may only be carried out by authorized installation specialists and qualified electricians.
- If you should run into difficulties please contact a specialist, our customer service or spare parts department or one of our representatives.
- Illustrations may differ from the supplied version of the machine. Functions or processes to be carried out remain the same.

Disclaimer:

We assume no responsibility for printing errors, mistakes and technical changes.

The brands and trademarks mentioned in this document refer to their owners or the products thereof.

1.2. Warning and information symbols

1.2.1 Symbols in this documentation

Warnings are identified by the following symbols, depending on the hazard classification.

Be especially aware of safety and hazards when working in situations identified by warning symbols.

Comply with the occupational health & safety and accident prevention regulations which are applicable in your country.



DANGER

Risk of death or injury

Direct threat to life and health of people. Non-compliance may lead to death or serious injury.



WARNING

Risk of death or injury

Potential risk to life and health of people. Non-compliance may lead to serious or critical injury.



CAUTION

Risk of injury

Potentially hazardous situation. Non-compliance may lead to minor or moderate injury.

ATTENTION

Damage to property

Potentially hazardous situation. Non-compliance may lead to damage to property.

Other Symbols



INFO symbol

Useful information and Tips.



Bullet point:

For lists with key information on the respective subject.



Handling instructions:

Carry out the detailed steps in sequence.




Handling instructions, warning

Carry out the detailed steps in sequence.

1.2.2 On the product



Observe all warning notices on products and ensure they remain legible.

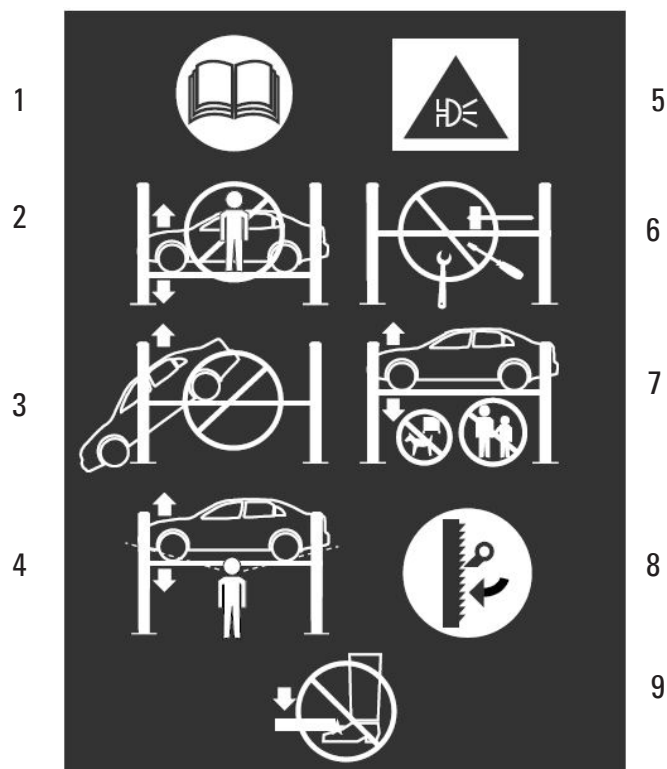

Warning sticker on control column.

1. Read original operating instructions.
2. Riding prohibited.
3. One-side, one end, one corner raising of vehicle prohibited.
4. Watch vehicle when raising and lowering.
5. Heed acoustic warning signals from signal generator.
6. Never place any objects on the lifting platform.
7. Keep people and animals away from lifting platform.
8. Locking latch 100% engaged before working.
9. Risk of crushing feet on lowering.

Operating instructions in brief

Refer to the full operating manual.

The lift may only be operated by authorized staff.

The lift must be used for its intended purpose.

Do not exceed the load capacity specified on the nameplate.

The weight distribution at the front/back may not exceed the value given in the full operating manual.

Comply with all Health and Safety regulations.

Do not carry persons on the lift.

Apply the vehicle handbrake after driving onto the lift and before lifting the vehicle.

The main switch is also an emergency stop switch. In case of emergency, turn the switch to "0".

Secure the lift against unauthorized use by locking the main switch.

Obstacles must be kept out of the moving load and lift area.

1. BEFORE LOADING

Check that the lift is in full working order. Refer to the Operating and Service Manual.

The lift must be fully lowered, there must be no objects, grease, oil, or personnel in the work area or on the runways.

Main switch to "ON".

Drive the vehicle on centered on the runways (a colleague should help guide the vehicle on).

2. LIFTING

There must be no-one on the lift or in the vehicle when lifting and lowering.

Press the "UP" button.

Do not leave parts lying around on the lift.

Only continue the lifting process up to the desired height if the vehicle is stable.

Do not leave the lift at its full rise for long periods.

The lift drops into the locking position by pressing the "DOWN" button.

To use the lifting tables (if applicable), turn the selector to the correct position.

3. WHEN LIFTING

The vehicle doors must be closed when raising and lowering.

Monitor the load and the lift when raising and lowering.

Do not loiter within range of the moving load and lift when raising and lowering.

Do not climb onto the raised vehicle or the lift.

4. BEFORE LOWERING THE LIFT

Remove obstacles from under the car and lift.

Do not loiter within the work area of the lift.

5. LOWERING

Press the "LOWER" button and lower to the desired height. The lift will automatically raise to clear the locks before lowering. The lift stops when the danger zone is reached.

Press the "LOWER in danger zone" button and lower to the lower limit.

6. DRIVING OFF

The lift must be fully lowered.

The drive-on ramp chocks must be fully lowered.

Carefully drive the vehicle from the ramps and away from the lift zone.

7. SWITCHING OFF

When the lift is not in use, turn the main switch to OFF.

8. TROUBLESHOOTING AND MAINTENANCE

Refer to the Operating and Service Manual.



BQ-005

These instructions contain information on operation of the lifting platform.



Keep hands away from ends of members during lifting platform operation.



Keep feet away from lifting platform whilst lowering.

1.3 Intended use

The post lift may only be used:

- In indoor areas for lifting unoccupied motor vehicles.
- For lifting vehicles with a max. load capacity of 3500kg, 4000kg, 6500 kg, 5500 kg, according to the lift variant. The permitted load capacity of the lifting table is max. 3000 kg, 3500kg.
- If the weight is distributed correctly. By default, the load should be centered in the direction of motion. If the main load (e.g. engine) is however at the front or the back, the following applies:
 - main lift: at front max. 2/3, at back 1/3 of load or vice versa.
 - for lifting tables: at front max. 3/5, at back 2/5 of load or vice versa.
- With correctly aligned, adjustable runways. The vehicle must be approximately centered on the two runways.
- In accordance with the technical data in Chapter 7, in technically sound condition.

1.4 Incorrect use, incorrect behavior

Incorrect behavior presents a residual risk to the life and health of the people working in the lift area.

The manufacturer assumes no liability for damage resulting from use other than the intended purpose and from incorrect behavior.

The following is prohibited:

- Climbing onto or riding on the post lift or the load.
- Lifting when there are people in the vehicle.
- Lifting/lowering when people or animals are in the danger zone, in particular below the lift.
- Jerky lifting or lowering. Do not cause the lift to vibrate.
- Throwing objects onto or under the lift.
- Lifting a vehicle at the incorrect pick-up points when using a lifting table.
- Lifting a load on only one runway of the main lift or the lifting table.
- Loitering or working in the danger zone when it is

not lowered into the lock position (latch bars).

- Activating the machine when safety equipment or mechanisms are not in place (Example: locking latches are not fitted).
- Driving onto the lift when the adjustable runways are incorrectly aligned.
- Lifting loads not listed in Chapter 1.3.
- Lifting vehicles containing hazardous goods.
- Operating outdoors or in workshops at risk from fire or explosion.
- Washing cars on the post lift.
- Modifications of any kind.

1.5 Internal accident, health and safety, and environmental information

This operating manual does not include the operating instructions which need to be drafted by the user of the post lift.

The internal operating instructions regulate actions within the company for the prevention of accidents, and risks to health & safety and the environment.

These also include actions in the case of an emergency, first aid measures etc.

2.Safety

2.1 Operators

The post lift may only be operated without supervision by persons who:

- Are 18 years old and above.
- Are familiar with the basic regulations on health & safety and accident prevention.
- Have been trained to handle and operate the post lift.
- Have proven their ability to do so to the company.
- Have been expressly appointed in writing to operate the lift.
- Have read and understood the operating manual.

2.2 Basic safety requirements

- Only operate the post lift after a specialist has certified in the inspection log that it has been correctly set up.
- Always follow the operating instructions (labels on the post lift).
- If several people work on the post lift, a supervisor must be appointed by the company.
- The post lift may only be operated in technically sound condition with regard to safety and with all safety mechanisms in place.
- The control box or control unit may only be opened by a qualified electrician.
- Safety inspections must be conducted regularly, at least once annually.
- If signs of a defect appear, immediately shut down the post lift, inform a supervisor and contact the customer service if necessary.
- Keep the work area clean and free of oil, grease, and contamination.
- Before lifting/lowering, check that the acoustic alarm (buzzer) works.
- Before standing or working in the danger zone underneath the main lift/lifting table, lower it into the lock position (latch bars) using the "Down" button.
- There must be no obstacles in the path of the main lift or the lifting tables.
- Always monitor the load carefully when lifting and lowering.
- Always stop the vehicles safely, centered on the runways. Secure the vehicle against rolling with wheel chocks.
- For lifts with lifting tables:
Always lift the vehicle with the lifting table on the pick-up points approved by the vehicle manufac-

turer. Lift it for a short distance and check that the pick-up points are secure. Only then can the vehicle be moved to the required height.

- Take steps against traffic in the area of the post lift. Do not park other vehicles in the danger zone.
- Do not load main lifts and lifting table beyond the permitted capacity, comply with the permitted axle loads and load distribution in accordance with Chapter 2.3.
- When disassembling or fitting heavy vehicle parts, watch out for dangerous shifts in the weight balance, in particular when the vehicle is supported by lifting table. Secure the vehicle beforehand.
- Always fully lower, switch off and secure main lifts and lifting tables to prevent unauthorized use after completion of work (turn main switch to "OFF" and lock).
- Follow the maintenance and service schedule, record performance of maintenance and servicing (Chapter 9).
- Installation, maintenance and servicing may only be carried out by authorized specialists (maintenance contractors) (Chapter 9).
- Only qualified electricians may work on the electrics.
- Only trained people with knowledge of hydraulics/pneumatics may work on hydraulic or pneumatic equipment.
- Appropriate personal protective equipment must be worn when working in the area of the lift in accordance with the applicable health & safety and accident prevention regulations. For example, protective gloves, protective goggles, safety shoes.
- Only original spare parts from the manufacturer may be used.
- The lift must be inspected by a specialist after repairing any supporting parts.

2.3 Permitted axle loads and weight distribution

Before lifting the vehicle, you must ensure that the weight distribution is correct.

When the weight distribution is correct (default position in direction of motion) the main load is located at the front (e. g. engine).



Risk of injury through toppling of the vehicle when incorrectly loaded.

WARNING

- ➔ Comply with the permitted load capacity as in Fig. 1 and 2.
- ➔ Comply with the permitted weight distribution as in Fig. 1 and 2.
- ➔ Comply with the approved distances between pick-up points as in Fig. 3.

Figure 1: SM35/40/55LT (with lifting table)

SM40LT Load capacity

- Main lift 4000 kg ● Lifting table 3000 kg

Permitted weight distribution

- Main lift
 - front max. 2/3: F1 = max. 2670 kg
 - back max. 1/3: F2 = max. 1330 kg
- Lifting table
 - front max. 3/5: F1: 1800 kg
 - back max. 2/5: F2: 1200 kg

SM35/55LT Load capacity

- Main lift 3500/5500 kg ● Lifting table 3500 kg

Permitted weight distribution

- Main lift 5500kg
 - front max. 2/3: F1 = max. 3670 kg
 - back max. 1/3: F2 = max. 1830 kg
- Main lift 3500kg
 - front max. 2/3: F1 = max. 2330 kg
 - back max. 1/3: F2 = max. 1170 kg
- Lifting table
 - front max. 3/5: F1: 2100 kg
 - back max. 2/5: F2: 1400 kg

Figure 2: SM40 /MOT40 or SM65/MOT65

Load capacity

- SM40/MOT40 4000kg ● SM65/MOT65 6500 kg

Permitted weight distribution





- SM40 /MOT40
 - front max. 2/3: FA1 = max. 2670 kg
 - back max. 1/3: FA2 = max. 1330 kg
- SM65 /MOT65
 - front max. 2/3: FA1 = max. 4330kg
 - back max. 1/3: FA2 = max. 2170 kg

Figure 3: Approved distance between pick-up points on lifting table for SM40LT

- Length max. 1.7 m ● Width min. 1.2m

Figure 4: Approved distance between pick-up points on lifting table for SM55LT

- Length max. 2.1 m ● Width min. 1.4 m

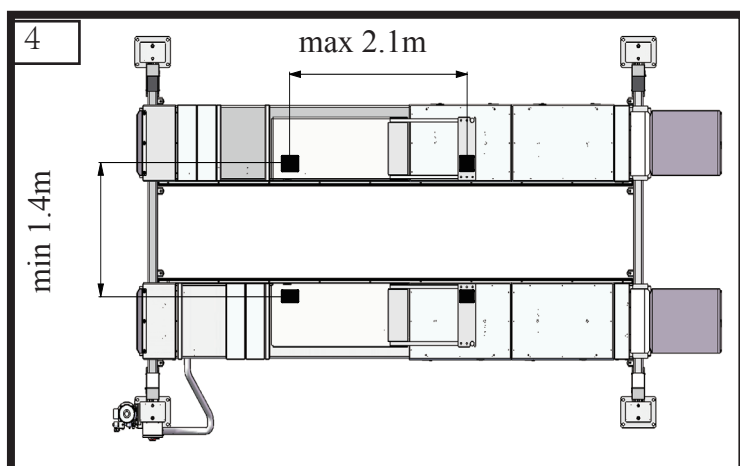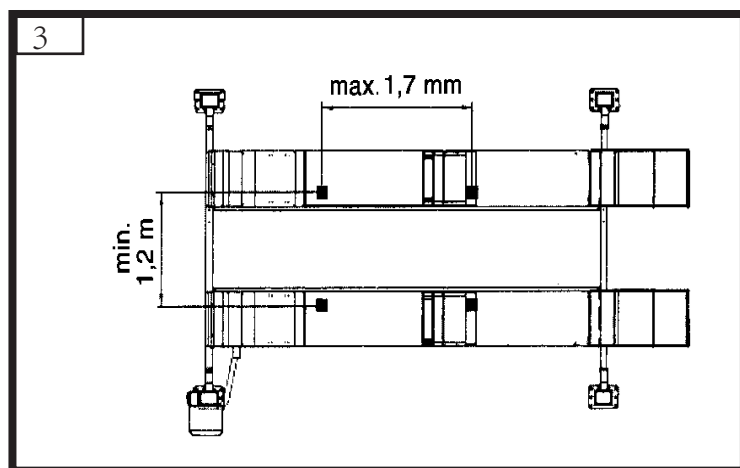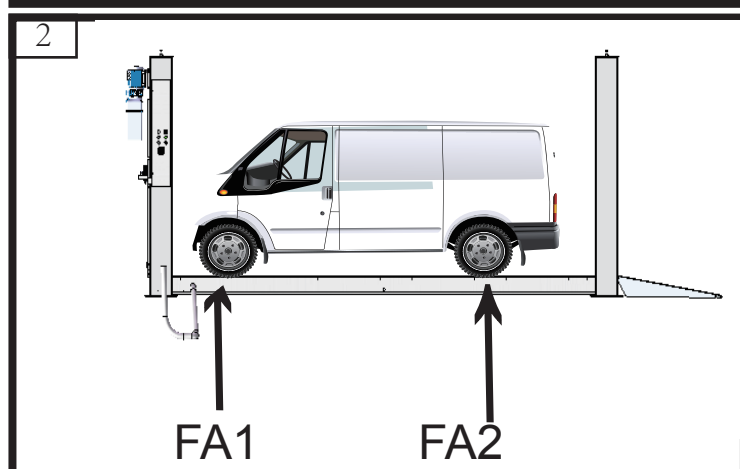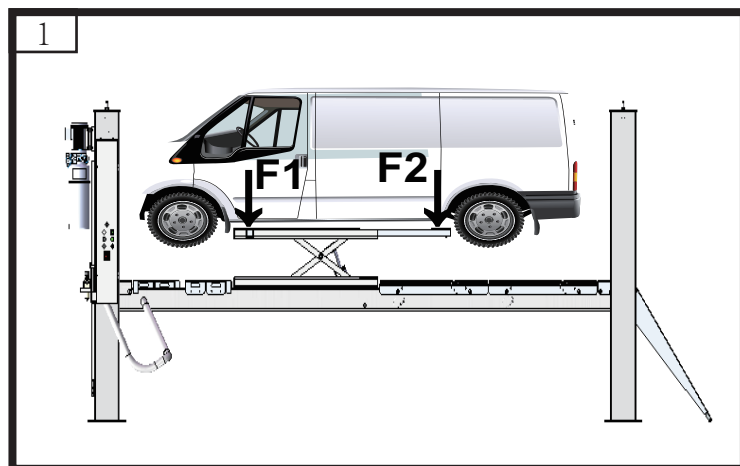

2.4 Ban on unauthorized modifications or alterations

- Unauthorized modifications and alterations to the post lift are not permitted for safety reasons.
- The operating permit shall also be deemed null and void.
- The Declaration of Conformity also becomes null and void.

2.5 Experts, competent persons

The post lift must be inspected after commissioning and at regular intervals (after max. one year), as well as after design modifications or repair of supporting parts. **Inspections may be carried out by the following people:**

Certified expert

These are people who have specialist knowledge in the field of lifts based on their professional training and experience.

Experts should be able to inspect lifts and make an expert assessment thereof.

TÜV experts, specialist engineers from the manufacturer or self-employed specialist engineers can be used for inspections.

Competent persons

These are people who have adequate knowledge in the field of lifts based on their professional training and experience.

They are sufficiently familiar with health & safety and accident prevention regulations as well as with lift technology in order to be able to assess the occupational health & safety compliance of lifts.

2.6 Maintenance contractors, installation staff

Maintenance, servicing and installation work may only be done by companies or specialists authorized by the manufacturer.

These people trained in the field of lifts are competent persons, who are trained for maintenance as well as repair work.

A competent person is a person who has adequate knowledge based on his professional training and experience and is also familiar with key regulations so that he:

- Can assess the work assigned to him,
- Can recognize potential risks,
- Can take actions required to eliminate the risk,
- And has the required knowledge of repair and fitment.

The specialist knowledge of a competent person must enable him to be in a position to

- Read and fully understand circuit diagrams,
- Fully understand the context with particular regard to any installed safety equipment.
- Possess knowledge of the function and design of system components.

Simple faults on the post lift may be rectified by operating staff.

In the event of a more serious fault, contact an authorized maintenance contractor.

2.7 Safety inspections by competent persons

Safety inspections must be carried out to guarantee the safety of lifts.

Safety inspections should be carried out in the following cases:

- Before initial operation, after initial installation. Use the form "Initial safety inspection before installation".
- After initial operation at regular intervals, but at least once a year. Use the form "Regular Safety Inspection".
- After any design modification to parts of the lift. Use the form "Unscheduled Safety Inspection".



The initial safety inspection as well as the safety inspections must be carried out by a **competent person**. We recommend that you also perform maintenance in the course of the inspection.



Unscheduled safety inspections and special maintenance work are required in the event of design modifications to the lift (fitting additional parts). The safety inspection must be carried out by a **competent person**.



Use the form supplied in the Annex containing lists for carrying out safety inspections. Please use the relevant form and staple it to the manual after completion.

2.8 Obligations of the plant operator

Operation of lifting platforms

In Germany, the use of lifting platforms is governed by the mandatory "Employers' liability insurance association regulations on health and work safety as defined in DGUV-100-500 (before BGR 500) Section 2.10". In all other countries, the applicable national regulations, laws and directives must be observed.

Checking of lifting platforms

Checks are to be based on the following directives and regulations:

- Basic principles for testing lifting platforms (DGUV-308-002 before BGG 945)
- The basic health and safety requirements stipulated in the directive 2006/42/EC
- Harmonized European standards
- The generally acknowledged rules of engineering
- The directive on the use of equipment 89/655/EEC and changes with Directive 95/63/EC.
- The applicable accident prevention regulations

The checks are to be organized by the user of the lifting platform. The user is responsible for appointing an expert or qualified person to perform checking. It must be ensured that the person chosen satisfies the requirements of BGG 945 as per Section 3.



The user bears special responsibility if employees of the company are appointed as experts or qualified persons.

Scope of checking

Regular checking essentially involves performing a visual inspection and a functional test. This includes checking the condition of the components and equipment, checking that the safety systems are complete and functioning properly and that the inspection log book is completely filled in.

The scope of exceptional checking depends on the nature and extent of any structural modification or repair work.

Regular checking

After initial commissioning, lifting platforms are to be checked by a **qualified person** at intervals of not longer than one year.

A **qualified person** is somebody with the training and experience required to possess sufficient knowledge of lifting platforms and who is sufficiently familiar with the pertinent national regulations, accident prevention regulations and generally acknowledged rules of engineering (e.g. BG rules, DIN Standards, VDE provisions, the technical regulations of other European Union member states or other parties to the agreement in the European economic area) to be able to assess the safe operating condition of lifting platforms.

Exceptional checking

Lifting platforms with a lift height of more than 2 meters and lifting platforms intended for use with people standing under the loadbearing elements or the load are to be checked by an expert prior to re-use following structural modifications and major repairs to loadbearing components.

An expert is somebody with the training and experience required to possess specialist knowledge of lifting platforms and who is sufficiently familiar with the pertinent national work safety regulations, accident prevention regulations and generally acknowledged rules of engineering (e.g. BG rules, DIN Standards, VDE provisions, the technical regulations of other European Union member states or other parties to the agreement on the European economic area) to be able to check and give an expert opinion on lifting platforms.

- The report must include:
- The date and scope of testing with details of any test items not yet performed
- The results of the test with details of any shortcomings established
- An assessment of whether there are any impediments to start-up or further use
- The details of any follow-up testing required
- The name, address and signature of the person carrying out the checks




The acknowledgement and rectification of any shortcomings found must be confirmed by the plant operator in the report.


Inspection log

An inspection log is to be kept as a record of the lifting platform checks performed. The inspection log book must contain a report on the test performed prior to initial commissioning and the regular and exceptional checks, as well as the applicable certification on (EC) type testing and the EC declaration of conformity.

3.The 4-Post Lift

3.1 Overview of parts

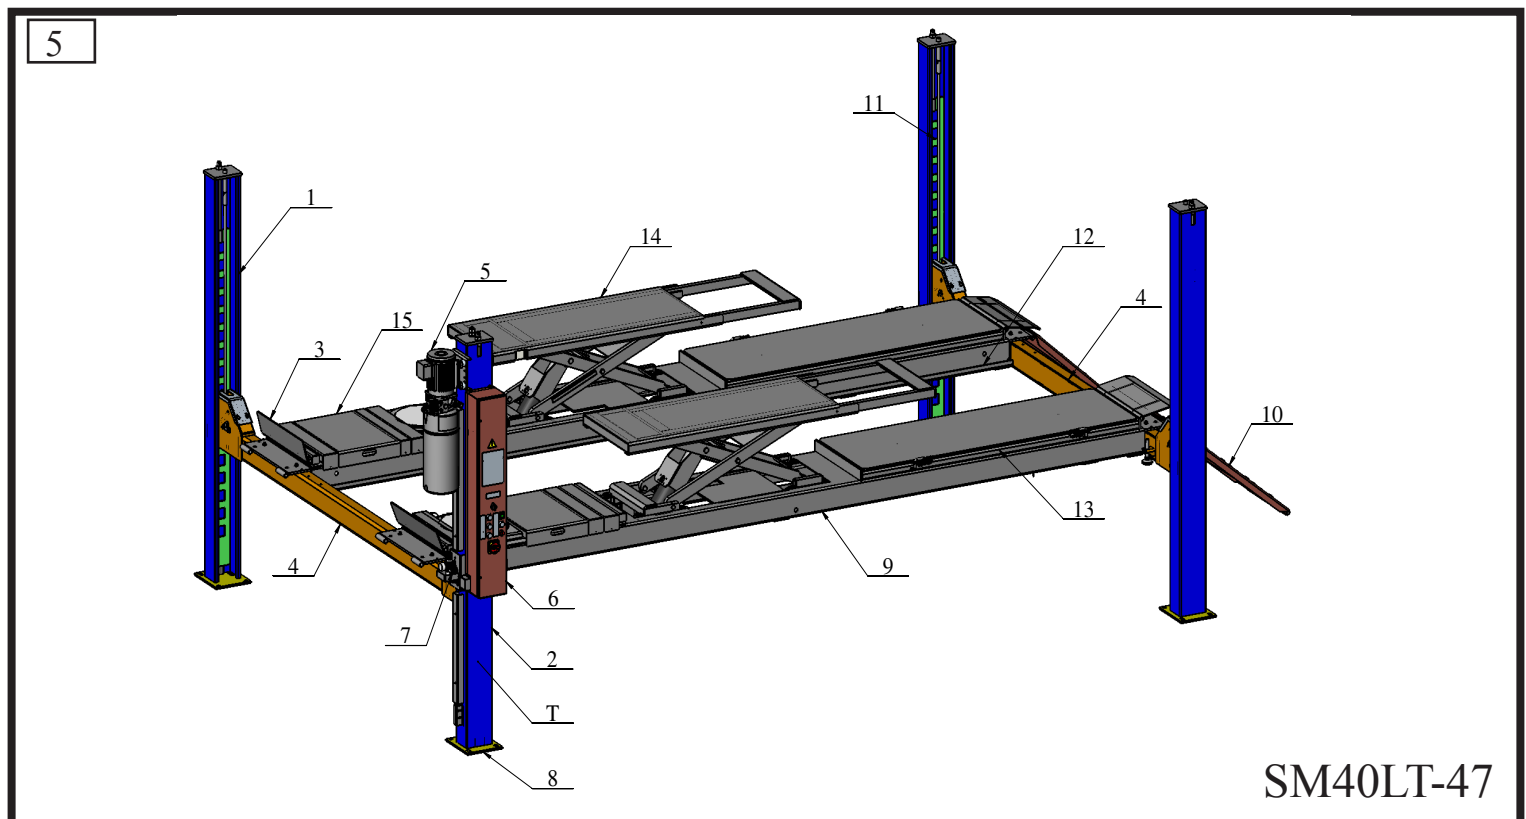

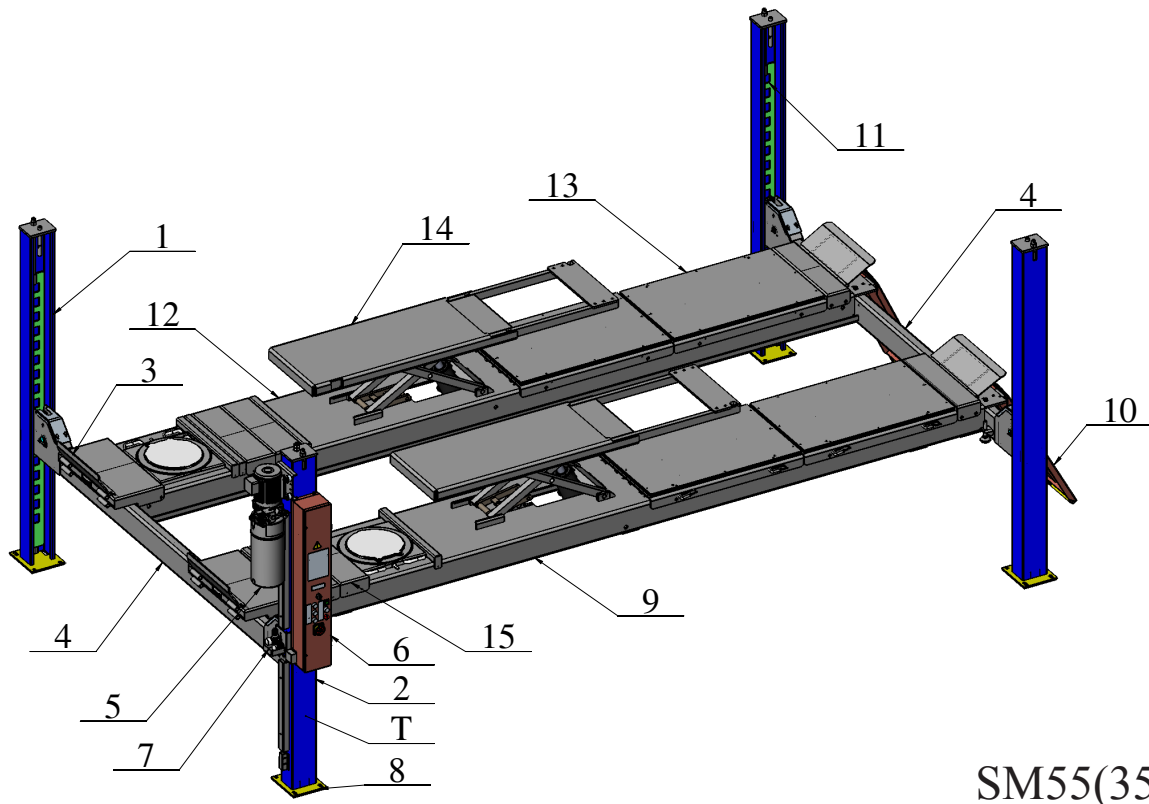

SM55(35)LT-51


Figure 5: Example of a 4-post lift with lifting table (SM40LT-47)

Figure 6: Example of a 4-post lift with lifting table (SM55/35LT-51)

1. Standard lift column
2. Lift column with control unit
3. Automatic ramp chock
4. Cross beams
5. Power unit
6. Control box
7. Compressed air unit with lubricator(option)
8. Base plate
9. Fixed runway
10. Drive-on ramp
11. Latch bar
12. Slave runway
13. Slip plate
14. Lifting table (SM55LT & SM40LT only)
15. Filler plate
- T Nameplate

3.2 General workflow

- After determining the vehicle data and aligning the runways, the vehicle is driven onto the main lift and secured against rolling.
- The vehicle is raised to the desired height with the main lift.
- With optional lifting table :
If a lifting table is used, the manufacturer-approved pick-up points on the vehicle are selected and the matching supports are placed underneath. After adjusting the selector on the control unit and checking that the weight distribution is correct, the vehicle is lifted by the lifting table, and the locking latch then locks. Only then can work continue in the danger zone.
- Main lifts and lifting table are fitted with a pneumatic locking mechanism.
- If the lift lowers even slightly, for safety reasons it automatically moves into the latch bar (locking latch).
- After completion of the work, the vehicle is lowered again to the ground and driven off.

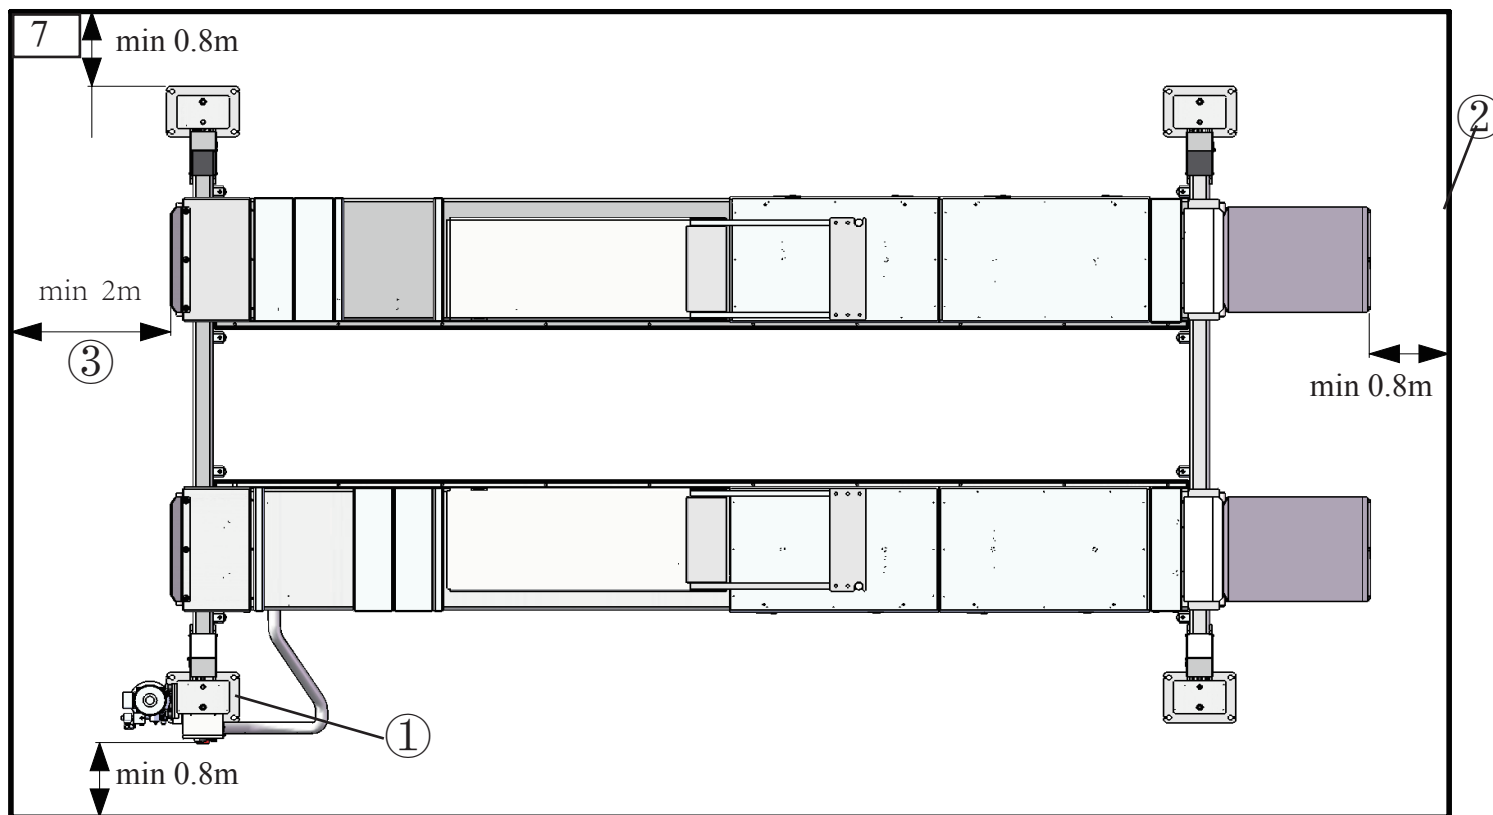

3.3 Work area, danger zones

Figure 7: Work area, danger zones

1. Control area
2. Work area and danger zone
3. Vehicle overhang



Risk of injury in the danger zone of the post lift in the event of incorrect behavior.

- ➔ Only remain in the danger area if you have been trained and briefed and assigned to the area.
- ➔ Keep the work area clean.
- ➔ Keep escape routes clear so that you can leave the danger zone quickly and safely in the event of an emergency.

3.4 Safety mechanisms

See figures 6 ... 13



Safety mechanisms protect both people and lift. They must not be disabled!

- ➔ Post lift danger zones are protected by safety mechanisms.
- ➔ Function and condition of the safety mechanisms must be checked daily!
- ➔ If safety mechanisms are triggered, the post lift stops immediately.
- ➔ If safety mechanisms are defective, the post lift must be taken out of use immediately and the main switch locked with a padlock. Any further use must be prevented until the machine is fully repaired!
- ➔ If the post lift is moved or taken out of use for long periods, check the safety mechanisms before re-commissioning and repair if necessary.

1. Buzzer

Acoustic alarm. Sounds:

- When lowering the main lift < 120 mm (foot protection).
- When lowering the lifting table (hand and finger protection).
- When troubleshooting (lifting/lowering using the override switch, for height equalizing or during emergency manual lowering).

2. Lockable main switch

"ON" setting: Post lift ready for use.

"OFF" setting: Post lift out of use. The mains voltage is still present inside the control box. Switching off (OFF) immediately stops any movement of the post lift (= emergency stop).

3. Locking latch on each lift column

The locking mechanism consists of a latch bar (3.1) and roller with cam shaft(3.2). Latch bar with 100 mm locking latch notches.




If a fault occurs in the hydraulic system or if the cable breaks or becomes slack, the brake mechanism is activated. The cam is pressed against the latch bar through a powerful spring action. In addition a lock cam latches (via an air piston) into the latch bar. All up or down movements stop immediately. Any further lowering is prevented.

4. Locking latch on both lifting table

The locking mechanism consists of toothed lock bars. On releasing the lift or lower button, the upper bracket swings down. The lock bars engage (ratchets).

Pos. 10.1 show for the SM55LT lift .


Pos. 10.2 show for the SM40LT lift .

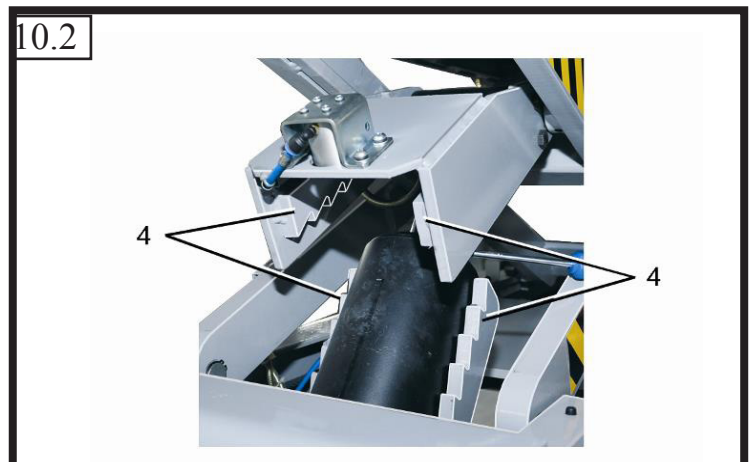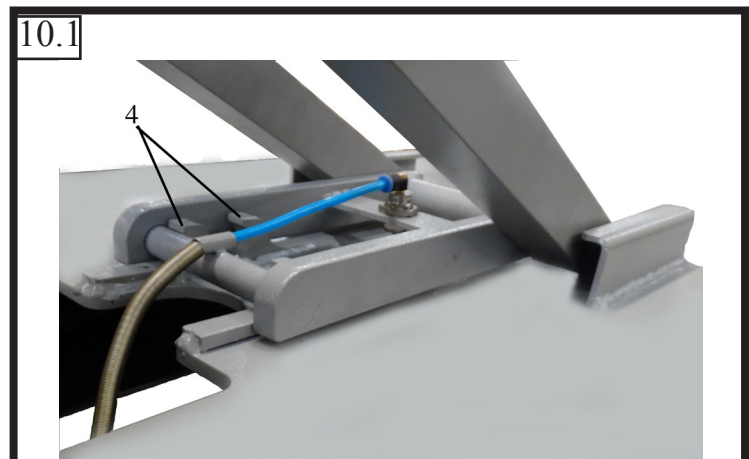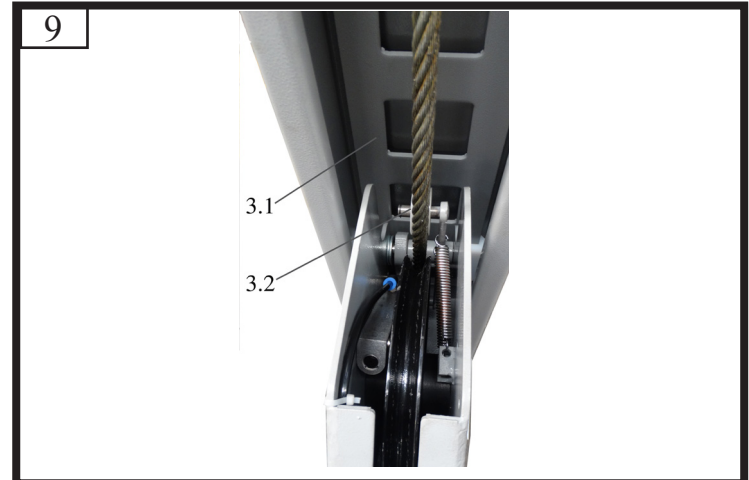

5. Foot protection switch on the lift column with control unit

Deactivates the lowering process at a lift height of 120 mm (foot protection, otherwise a crushing or shearing hazard exists).


You can only lower from this height by pressing the "Lower in danger zone" button (1-button safety switch).

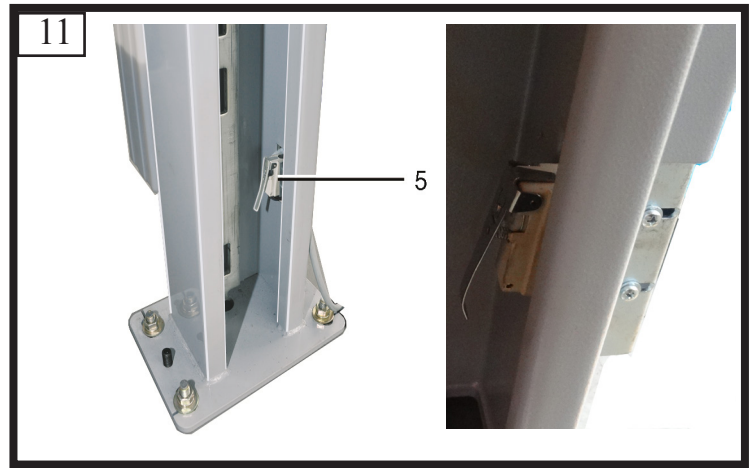

6. Pressure control valve

The pressure control valve (→ arrow) is factory set .

Prevents a sudden lowering of the lift in the event of a leak in the hydraulic hose (lowering speed = max. 1.5 x default speed).

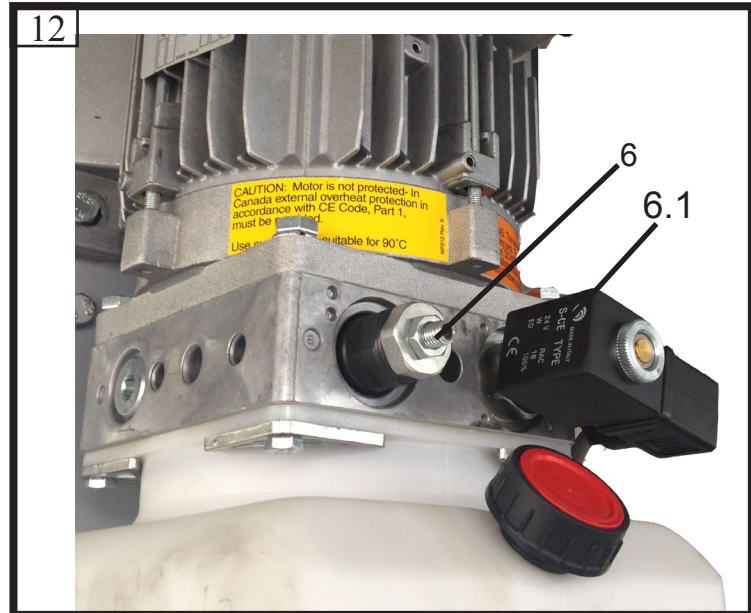


7. Lowering valve (emergency release) and emergency manual valves

- Pos. 6.1 Lowering valve for emergency release of the main lift (only the lift without lifting table) .
- Pos. 7: Emergency manual valve for main lift and lifting table. Fitted differently according to variant. Before use check assignment to main lift and lifting table .




During a power failure the valves close and stop any movement.

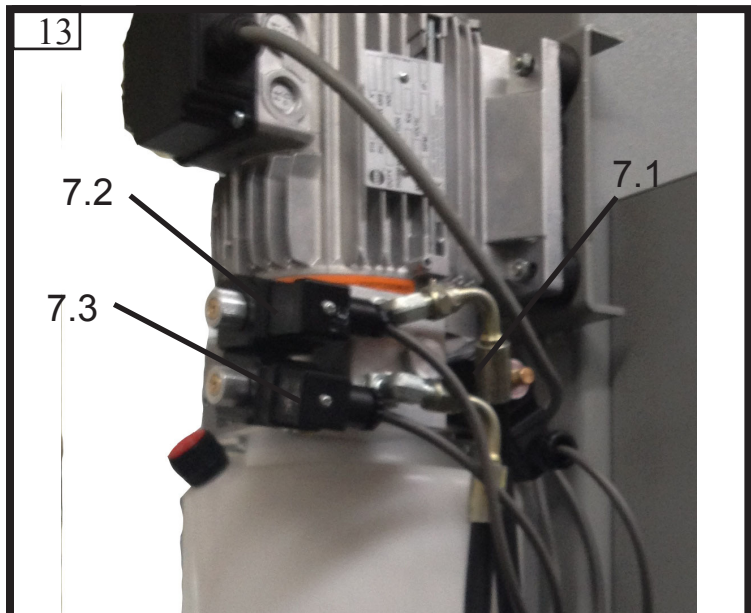

8. Broken cable and slack cable switch


- Pos. 8.1: Broken cable switch:
This switch is activated if the cable is broken. All movement of the post lift stops immediately. The control buttons will not function. Consult a competent person for repair.
- Pos. 8.2: Slack cable switch:
This switch is activated when the cable is too slack. All movement of the post lift stops immediately. The Down button will not function. The Up button will however function in order that the cable can be pulled tight again by raising the lift slightly.

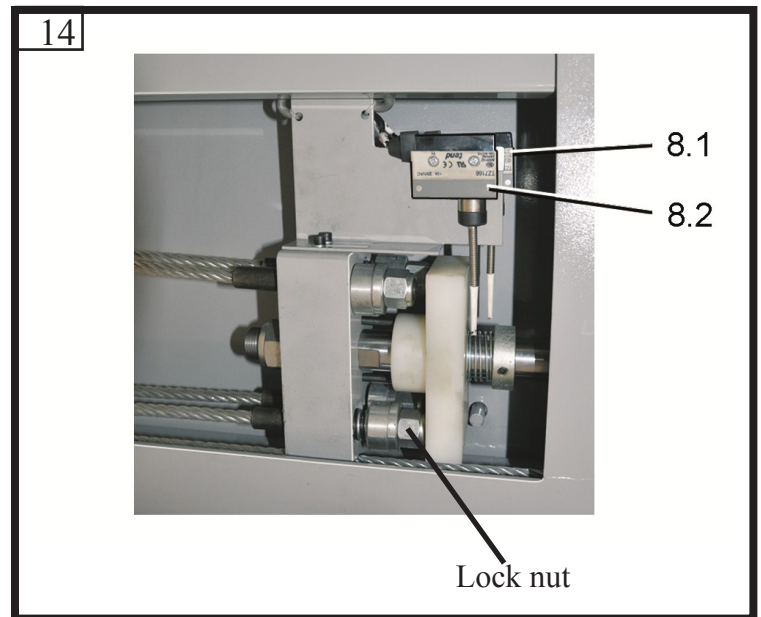

9. Photo sensor for lifting table runways:

Guards against height differences of > 50 mm between the runways

Stops the lowering or lifting process if the difference in height between the two runways is greater than 50 mm.

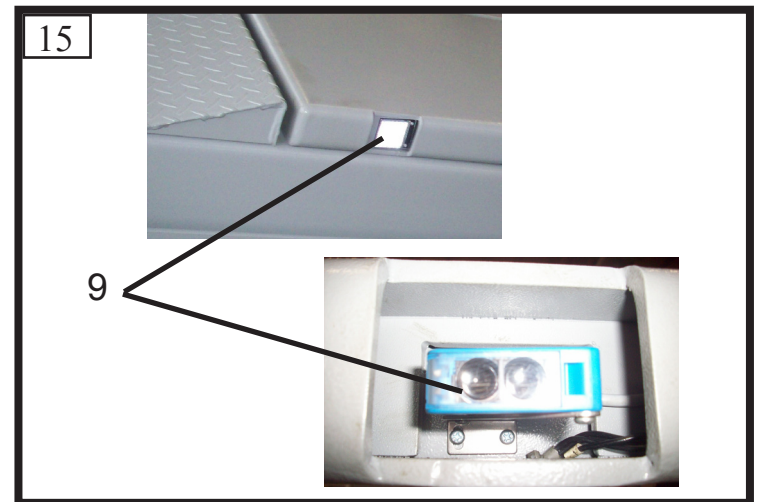

3.5 Control unit



All movement of the lift stops immediately when you release a pressed button.

Figure 16: Control unit in the lift column

1. **Selector**, only for SM40LT/SM55LT variant with lifting table:

- Left setting: Main lift active
- Right setting: Lifting table active

2. **UP button**

For main lifts or lifting tables.
Functions only if the button is pressed.
Post lift /lifting table runways move up.

3. **On/Off** switch for optional lighting.

4. **DOWN button**

- For main lifts or lifting tables .
Functions only if the button is pressed.



The main lift or lifting table runways move up for around 2 seconds to release themselves from the locking latches.



Runways move down until the automatic shut-off is activated 120 mm above the ground (foot protection, otherwise this may present a crushing and shearing hazard). The lowering process stops.


5. **LOCK button**

- For main lifts or lifting tables.
Functions only if the button is pressed.
- Main lift: Locks the cross beams in the latch bars of the four lift columns. Keep button pressed until all cross beams lock securely into the latch bars.
- Lifting table : Lowers both runways onto the toothed lock bars (ratchets).
Keep button pressed until both runways lock securely into the latch bars.

6. **DOWN button in the danger zone below 120 mm**

- For main lifts.
Only functions after the 120 mm automatic shut-off has reacted to DOWN (4). The runways can then be lowered completely if only button (6) is

16

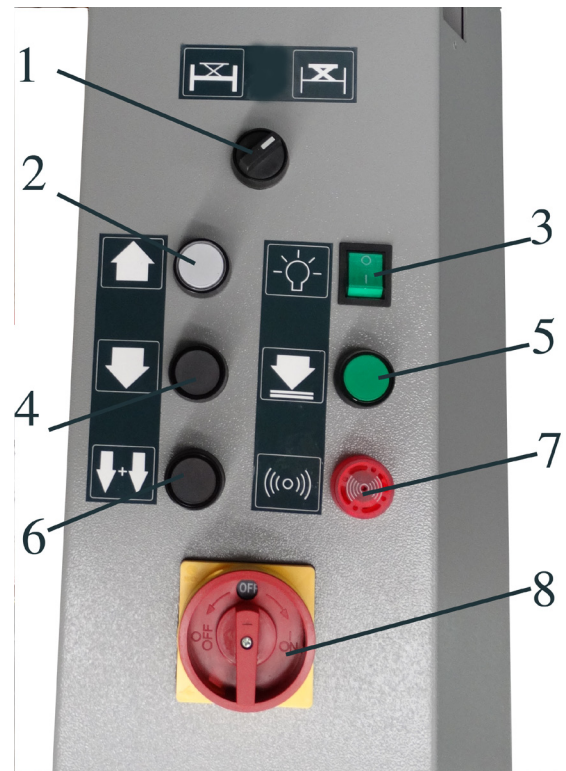

pressed at that time. A buzzer sounds throughout the entire lowering process.

7. **Buzzer**

Acoustic alarm. Sounds:

- When the main lift is being lowered < 120 mm (Foot protection)
- When the lifting table is being lowered (hand and finger protection).
- When troubleshooting (lifting/lowering using the override switch, for height equalizing or during emergency manual lowering).

8. **Lockable main switch**

"ON" setting: Post lift ready for use.

"OFF" setting: Post lift out of use. The mains voltage is still present inside the control box. Switching off (OFF) immediately stops any movement of the post lift (= emergency stop).

4. Operation



DANGER

Risk of injury when lowering the load onto objects below the lift or the vehicle. Vehicle may topple over.

- ➔ Before lowering, you must remove all objects from underneath the lift. This applies in particular to chassis stands and auxiliary jacks.
- ➔ Always monitor the lift and vehicle carefully when lifting or lowering.



DANGER

Risk of fatal injury if load is incorrectly distributed on both lifting tables. Vehicle may topple over.

- ➔ Check that axle loads and weight distribution are correct in accordance with Chapter 1.3.
- ➔ Secure the load with adequately sized chassis stands.



DANGER

Risk of fatal injury in the event of malfunction or damaged parts.

- ➔ Shut down post lift. To do so, set the main switch to "OFF" and lock it with a padlock.
- ➔ Consult a competent person.



When working with the post lift, make sure you follow the instructions listed in Chapter 2. Safety.

4.1 Emergency stop

1. To perform an emergency stop, set the main switch to OFF ("OFF" setting). The main lift or the lifting table stops immediately.

4.2 Switch the machine on

1. Switch on the power supply with the main switch ("ON" setting).
2. Check the operational status of the main lift and the lifting table.
3. Check the functionality of the control buttons.
4. Check the functionality of the buzzer. To do so raise the runways slightly from the bottom position and lower again. A buzzer must sound when lowering.
5. Lower the main lift (including drive-on ramps) lifting table completely.
6. Keep work area and runways clean (no objects lying around, no grease, no oil).

4.3 Determine the vehicle data


1. Determine the weight details and the vehicle height (see vehicle license).



Check the vehicle center of gravity, check the load and body. Check the permitted weight distribution on the lift.

2. Compare details with the nominal data of the lift.
3. Determine the approved pick-up points according to the manufacturers specifications.
4. If the vehicle data is not available, ask the supervisor.

4.4 Driving on

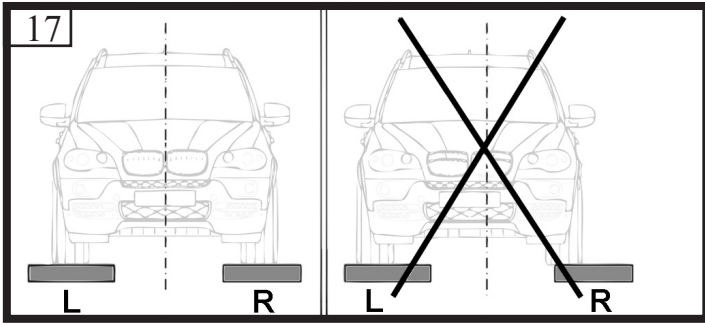

1. If required, set the adjustable runways (Fig. 17, Pos R) according to the width of the vehicle. To move them, loosen 2 runway bolts on each of the two cross beams, move the runways in parallel, then tighten the bolts again. (Only SM40&SM40LT Version lift can adjust the runway width, see technical data)
2. Drive the vehicle onto the runways centered on both sides (have someone guide you on). Make sure that the wheels do not hang over the edges of the runways.
3. Apply the vehicle handbrake, get out, and close all vehicle doors.
4. Secure the vehicle with chocks against rolling.
5. Place supports or pads at the 4 approved pick-up points. Only use supports or pads approved by the manufacturer. These must be correctly and stably positioned.
6. Take safety measures to ensure that neither people nor loads can collapse or fall and loads cannot slip. Make sure the weight distribution is correct.

4.5 Lifting/lowering



Risk of injury in the post lift zone.

DANGER

- Do not put people at risk when the lift or lifting table moves.
- Always monitor the danger zones when lifting or lowering.
- No-one must stand in the traffic zone of the lift.



WARNING

Danger of crushing and shearing of limbs (foot, toe, finger etc.). Possible uncontrolled movement when lowering in the danger zone (below the runways, cross beams) or when moving the lifting table scissors.

- No parts of the body below the runways, cross beams, or in the rolling jack scissors zone
- A buzzer sounds during the lowering process in the danger zone < 120 mm.
- Do not place objects below the lift or the lifting table ,

ATTENTION

Damage to high vehicles when LIFTING and LOWERING. Vehicles which are too high may collide with the ceiling.

- Even when LOWERING, the main lift or lifting table briefly moves up (out of the latches).
- Monitor the process constantly.
- Make sure that the vehicle does not collide with the ceiling.



The lifting or lowering process must be carried out uniformly so that the load does not change position.



If the vehicle does not remain stable, end all movement immediately. Then turn the main switch to "OFF" and lock it. The vehicle must now be lowered by an authorized competent person.

Raising the lift

1. Set the selector to the left (main lift).
2. Lift the main lift slightly with the UP button.
3. Check the steadiness and pick-up stability of the vehicle.
4. Only start to lift smoothly and to the required height if the vehicle is stable.

ATTENTION

Destruction of the hydraulic pump. Operating error, when the main lift is moved for long periods to its full rise.



Only move the lift to just below its full rise. Then release the button.

5. Lower the main lift with the "Lock" button to the lock position.



Comply with occupational health & safety and accident prevention regulations. Use safety stands when disassembling heavy parts. Check that weight distribution is correct.

Raise the lifting table

6. Set the selector to the right (lifting table).
7. Check the position of the supports or pads and correct if necessary.
8. Lift the vehicle slightly with the Up button.
9. Proceed as described above (Pos. 3 to 5).



Lifting with a slack cable

If the main lift is on the skew, the slack cable switch activates a stop. Only the lift function is still active. The buzzer sounds continuously throughout the lifting. The lift function is also locked if the cable breaks.

If the cable is slack, press the Up button. Raise the lift so that all 4 cables are tensioned.

Lowering the main lift or lifting table

1. Remove all objects in the lift and lifting table zone, in particular under the lift and lifting table.
2. Set the selector to the desired position.
3. Using the Down button, steadily lower the lift or the lifting table until the automatic shut-off (120 mm) is activated.

To do so, first move the runways up for around 2 seconds to release them from the ratchets.

Only then move the runways down until the automatic shut-off is activated. The lowering process stops.



When lowering, make sure that the main lift lowers smoothly. If not then stop the process.



If the main lift is skew, move it upwards slightly so that the cables pull tight..Then continue the lowering process.If this does not work, consult a competent person.

4. To completely lower the lift press "Lock" and "Lower in the danger zone" together.

Move the main lift or lifting table right to the bottom position. Make sure that the drive-on ramps are fully lowered.

4.6 Drive off

1. Remove chocks.
2. Carefully drive the vehicle off the lift and away from the lift area (have someone to guide you).

In doing so, make sure that the wheels never run over the edge of the runways or alongside them.

4.7 Switch the machine off

1. Disconnect the power supply with the main switch ("OFF" setting) and lock the switch with a padlock.

5.Problems, causes, actions

The following lists contain information on potential problems, their causes, and actions to rectify the fault.



Repairs to safety equipment of the lift may only be operated by authorized maintenance technician (certified expert or competent person) be performed.

During a breakdown (power failure), the lift remains automatically in safe mode. This means that all movement is halted.



If the lift is out of order for long periods, carry out the following steps:

1. Lower the lift to the lowest position.
2. Switch the main switch to Off and lock with a padlock.
3. Disconnect the power supply and air supply.

5.1 Troubleshooting by the operator

The following troubleshooting measures may only be carried out by an authorized operator.

Before doing so, make sure that power supply is connected, the main switch is in the "ON" position and an air supply of 6...8 bar is connected.



If the problem is not rectified by the listed measures, you must seek advice from a competent person.



The troubleshooting measures listed in 5.2 may only be carried out by maintenance contractors.

Problem	Possible cause	Actions
The motor is not running.	• Mains fuse is faulty.	Reset or change the mains fuse.
<p>The runways lower unevenly during the lowering process → Lift or lifting table runways tilted.</p> <p>Main lift</p> <ul style="list-style-type: none"> • Slack cable switch or broken cable switch activated. • Can lift when cable is slack. If cable is broken the whole lift is locked. • Lowering locked. <p>Lifting table</p> <ul style="list-style-type: none"> • Photosensor disconnected. • Height difference > 50 mm. • Whole lift is locked. 	<ul style="list-style-type: none"> • An object is blocking the downward motion. The lowering process is aborted. • Load unevenly distributed. • Settling function still active: main lift and lifting table partly still in the lock position (Lock bar/ratchets). • Slack or broken cable on one of the lift columns. 	<p>Main lift</p> <ol style="list-style-type: none"> 1. Move lift up slightly. Make sure that all cables are tensioned. 2. Remove objects from under the lift. 3. Carry out adjustments. To do so, lower the lift completely. 4. Check that lift is being correctly operated. 5. If this cannot be done: (→ Chapter 6. Authorized lowering) or (→ Chapter 9. Maintenance/repair). <p>Lifting table</p> <ol style="list-style-type: none"> 1. Consult a competent person (→ Chapter 6. Authorized lowering)
Control unit does not work. A buzzer sounds.	• Runways misaligned. Misalignment protection activated.	Consult maintenance contractors (→ Chapter 6. Authorized lowering).
<p>Lowering process stops abruptly.</p> <p>A buzzer sounds, control unit is out of order.</p>	<ul style="list-style-type: none"> • Cable too slack. • Cable broken. 	<ol style="list-style-type: none"> 1. Switch main switch to "OFF" and lock it. 2. Consult maintenance contractors. Change the cable.
<p>The main lift does not react when being lowered.</p> <p>A buzzer sounds.</p>	<ul style="list-style-type: none"> • Cable too slack or damaged. Slack cable switch activated. 	<ol style="list-style-type: none"> 1. Switch main switch to "OFF" and lock it. 2. Consult maintenance contractors. Tighten and adjust cable (→ Chapters 11.11 and 13.4). Restart.
The process stops after a few centimeters when lowering into the lock position.	• Pneumatic solenoid valve not supplied with compressed air.	Check compressor connection.

Lift button does not work. Main lift or lifting table: Runways do not move up.	<ul style="list-style-type: none"> Hydraulic oil level too low. 	<ol style="list-style-type: none"> Refill hydraulics up to gauge mark (→Chapter 9.4). Check with dipstick. <p>Attention: Using rapeseed based oil destroys the seal. Use only biodegradable oils (HEES-oils based on synthetic esters). The water content of the oil may not exceed 2 %.</p> <p>Do not mix bio-oils with mineral oils.</p>
Runways do not lift with a load. They do however rise without a load.	<ul style="list-style-type: none"> The lift is overloaded. Rated load capacity exceeded, maybe on one runway. Hydraulic pressure incorrectly set on pressure control valve. 	<ol style="list-style-type: none"> Check vehicle weight. If necessary reposition the vehicle (→ Chapter 2.3. rated weight distribution). Correct setting on pressure control valve.
Power failure on main lift which is locked in the latch bars.	<ul style="list-style-type: none"> No mains supply. 	Can only be lowered with manual pump and optional hydraulic power unit.

5.2 Troubleshooting by authorized maintenance contractors

Problem	Possible cause	Actions
Control unit does not work. A buzzer sounds.	<ul style="list-style-type: none"> Runways misaligned. Misalignment protection activated. 	Lower the lift or lifting table, → Chapter 6. Authorized lowering.
The main lift does not react when being lowered. Only lifting table can be lowered. A buzzer sounds.	<ul style="list-style-type: none"> Cable too slack or damaged. Slack cable switch activated. 	<ol style="list-style-type: none"> Tighten and adjust cable (→ Chapter 11.11 and 13.4), Change if necessary. Lower lift completely (→ Chapter 6). Carry out function test.
Lift does not work. A buzzer sounds	<ul style="list-style-type: none"> Fuses damaged. Thermal protection disconnected. Transformer damaged. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> Reset or replace fuses. Connect thermal protection. Replace transformer.


The motor is not running.	<ul style="list-style-type: none"> • Incorrect supply voltage to the motor. • Wiring loose. • Faulty motor. • Faulty limit switch. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Supply the correct voltage to the motor. • Check all wiring connections and repair or insulate if necessary. • Test function of the Up switch. Replace if necessary. • Check function of overhead limit switch. Replace if necessary. • Change hydraulic power unit for motor.
Up button does not work. Runways do not move up(main lift or lifting table).	<ul style="list-style-type: none"> • Lowering valve is open. • Pump is sucking air. • Suction pipe disconnected from pump. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Clean or replace lowering valve. • Tighten fittings on suction pipe. • Replace suction pipe.
Runways do not lift with a load. Runways rise however without a load.	<ul style="list-style-type: none"> • Insufficient voltage supplied to motor hydraulic power unit. • Lowering valve is dirty. • Release valve incorrectly set. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Supply the correct voltage to the motor. • Clean the lowering valve. • Adjust release valve.
Runways lowering slowly.	<ul style="list-style-type: none"> • Check valve is dirty. • Lowering valve dirty. • External oil leaks on pipes and hoses. • Dirty installation space (check valve and lowering valve). 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Clean check valve. • Clean lowering valve. • Eliminate leaks.

Lift speed too low.	<ul style="list-style-type: none"> • Air has mixed with oil or is being sucked in. • Hydraulic hose is loose. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Change oil (→ Chapter 9.4). • Tighten fittings on suction pipe. • Secure the oil return tube.
Leak in hydraulic power unit	<ul style="list-style-type: none"> • Hydraulic pump is faulty. 	Repair hydraulic pump.
Fault on hydraulic pump.	<ul style="list-style-type: none"> • Pressure control valve set incorrectly. • Overloading (vehicle too heavy). 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Correct the pressure control valve. • Replace hydraulic pump. Do not put excessively heavy vehicles onto the lift.

Hydraulic oil leaking from the filler/breather cap.	<ul style="list-style-type: none"> • Air has mixed with the oil or is being sucked in. • Oil return line is loose. • Hydraulic hose is damaged. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Change oil (→ Chapter 9.4). • Tighten fittings on suction pipe. • Attach return line. • Replace hydraulic hoses.
Runways lift unevenly (Height difference in runways).	<ul style="list-style-type: none"> • Cables are out of adjustment • Lift not leveled. • Floor is uneven. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Correct the cable tension (→ Chapter 11.11 and 13.4). • Reset and accurately level the lift. • Place spacers/shims underneath (Chapter 13. Commissioning).
Anchor is loose.	<ul style="list-style-type: none"> • Assembly fault, for example drill holes are too big or load capacity of concrete floor is inadequate. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Repair the lift. • Re-install (→ Chapters 11 to 13). Follow installation requirements.
Runways either do not lift to full rise or they chatter during lifting.	<ul style="list-style-type: none"> • Hydraulic oil level too low. 	<p>Check oil level. If required bleed the hydraulic cylinder (→ Assembly manual).</p>
Runways do not lower.	<ul style="list-style-type: none"> • Inadequate air supply. • Locking latches are offset. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • Check air pressure and adjust of necessary (6 ... 8 bar). • Check whether air lines are leaking or crushed. • Check locking mechanism, repair if necessary.
Locking latches not latching or can not be released.	<ul style="list-style-type: none"> • Compressed air supply interrupted. • Faulty control valve for air supply. • Locking mechanism is jammed. • Air cylinder for locking mechanism is dirty. 	<p>Check locking mechanism, repair if necessary.</p>
Lowering process stops abruptly. A buzzer sounds, the control unit is out of order.	<ul style="list-style-type: none"> • Cable is too slack. • Cable broken. 	<p>Depending on cause:</p> <ul style="list-style-type: none"> • turn main switch to "OFF" and lock it. • Check all cables. <p>Replace faulty or warped cables (Chapter 9.6).</p>

6. Authorized lowering

Only by authorized competent persons



WARNING

Risk of injury in the case of incorrect behavior. Only authorized competent persons may lower lifts as described below.

- ➔ Cordon off the danger zone, prevent access by all persons.
- ➔ Constantly monitor the danger zones when lifting or lowering.
- ➔ No-one may remain in the lift traffic zone.
- ➔ Only qualified electricians may carry out work on the electrics.

Figure 18

1. Electronic alignment control button:
Functions only when the photosensor(LT version) or slack and broken switch is disconnected.
2. Lifting table leveling button (SB7, only LT version)

6.1 Manually lowering the lift when there is a height difference of > 50 mm

After the photosensor has been activated when the height difference between the runways is **above 50 mm**, the lifting table are locked completely. The main lift can also no longer be lowered.

To correct this, proceed as follows. A buzzer sounds throughout the entire lifting/lowering process.

1. Secure the danger zone, see above.
2. Remove the safety cover on the side of the control unit.
3. Set the selector on the main lift or lifting table as required.
4. Push the electronic alignment control button (1) together with the UP or DOWN button. In doing so, the main lift or lifting table move up to full rise and then down to the bottom position.



5. If both runways are lowered completely onto the floor, turn the main switch to the "OFF" position, wait a short while, then turn the main switch to the "ON" position.
6. Conduct a function test. The lift is now ready for operation again.
7. Attach the side safety cover and screw back into place.

6.2 Leveling the lifting table



Risk of injury due to height difference in the runways when the lift is loaded. Vehicle may topple over.

- Adjust the height of the runways slightly.
- Avoid large differences in height between the runways.
- Consult a competent person if lift is too skewed.

i The height level of the left or right runways can be manually adjusted by pressing the red button (2). This is done by equalizing the hydraulic fluid within the hydraulic system.

1. Push the red leveling button (Fig. 18, Pos. 2) together with the UP button until both runways are at the same height.

An adjustment process is carried out when the buttons are pressed.

2. If necessary, release the buttons and repeat the process again until the runways are at the same height.
3. Push in the leveling button together with the DOWN button until both runways are completely lowered onto the floor.
4. Turn the main switch to the "OFF" position, wait a short while, then turn the main switch to the "ON" position.
5. Carry out a function test. The lift is now ready again for operation.
6. Attach the side safety cover and screw back into place.

6.3 Emergency manual function

Even if the post lift fails totally, the vehicle can be lowered, for example by disconnecting the power supply.


The main lift tables can be lowered from one locking latch to the next, albeit step by step.

Example: Lowering the main lift:

i Depending on the assembly situation it may be that the emergency manual valves are fitted the wrong way round. Always check using the cable routing and color as a guide and using a function test, check the assignment of the valves to the lifting tables and main lift.

1. Secure the danger zone, see Warnings.
2. Release the air cylinders on all lift columns and lifting table.

19

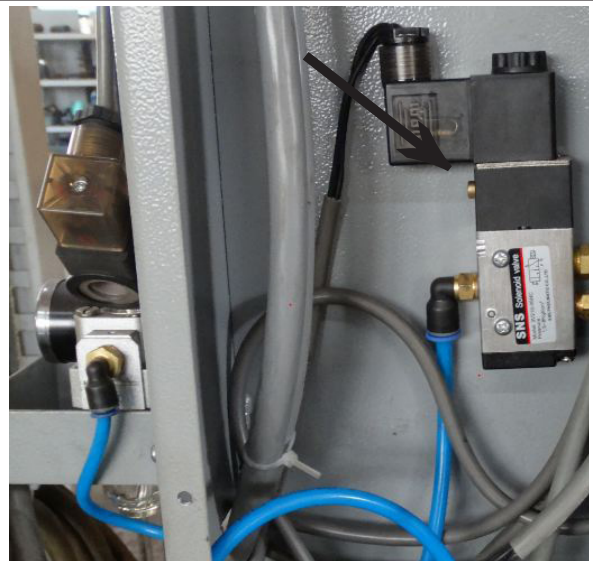

20



Pin the spindle of the exchange valve of the control box. then air cylinders of column and lifting table working to release the lock .Make sure the air supply is not disconnecting.(for SM55LT/ SM40LT lift ,there are two exchange valves ,one valve for the main lift and another one for the lifting table)

3. For the lift without lifting table ,check the valve of the power unit ,pin the middle of the valve ,see the picture 20.then the power unit released.

4. For the lift with lifting table ,check the valve of the power unit,first loose the spindle of the main valve.see picture 21. Second,pin the middle of the valve see the picture 22,then the power unit released.

(one valve for the main lift ,and another one for the lifting table)

5. Should make sure release the air cylinder and the power unit synchronously.

6. Repeat the process until the main lift has been lowered completely to the floor.

9. Make sure that the spindle of the mian valve of lift with lifting (SM40LT/SM55LT/SM35LT) is screwed on completely, otherwise the lifting function will not work.

21




22



7. Technical data


		SM40-47 SM40-51 SM40NB-47 SM40-47-BMW	SM40LT -47
	Load capacity Main Lift Lifting table	4000 kg	4000kg 3000kg
	Main lift Stroke	1790mm	1790mm
A	Lift height Max without AK/FK/CK	1955mm(Fig.23))	1955 mm
B	Lifting table height Max. Drive on height	1920mm (Fig.24)	390mm 66mm
C	Overall length without drive- on ramps	4853 mm (SM40/40NB-47) 4968mm (SM40- 47-BMW) 5253 mm (SM40-51)	4853 mm
D	Ramp length	1000 mm(Fig.23) 1320 mm(Fig.24)	1000 mm
E	Overall width	3347mm (SM40-47/51) 3102mm (SM40NB-47) 3320mm (SM40-47-BMW)	3347 mm
F	Lift height Min Drive on height without AK/FK/CK	167 (Fig.23) 207 (Fig.24)	167mm
I	Runway width Lifting table width	560mm(Fig.23) 630mm(Fig.24)	560mm 550mm
J	Inner distance between runways	800 /950/1100 (SM40-47/51) 975/1025/1075 (SM40-47-BMW) 900(SM40NB)	800/950 /1100
K	Min wheel base	1610mm (SM40-47/51) 1949mm (SM40-47-BMW)	2175 mm
M	Max wheel base For AK	4145mm (SM40-51) 3745mm (SM40-47) 3750mm (SM40-47-BMW)	3815 mm
G	Runway length	4700mm (SM40/40NB-47) 5100mm (SM40-51)	4700mm

H	Lifting table length		1490-2000mm
	Electrical connection	400 v, 50 Hz (3+N+PE)	400 v, 50 Hz (3+N+PE)
	Motor power rating	4 kW	4 kW
	Noise level	70 dB(A)	70 dB(A)
	Ambient temper- ature range	0...50 °C	0...50 °C
	Relative humidity range (without condensation, at 20 °C)	30...95 %	30...95 %
	Compressor connection	8...10 bar	8...10 bar
	Lift time lift	45 Sec.	45 Sec.
	Lift time lifting table		10. Sec
	Hydraulic system operating pressure	190 bar	190 bar
	Hydraulic oil tank capacity	12 liters	14 liters

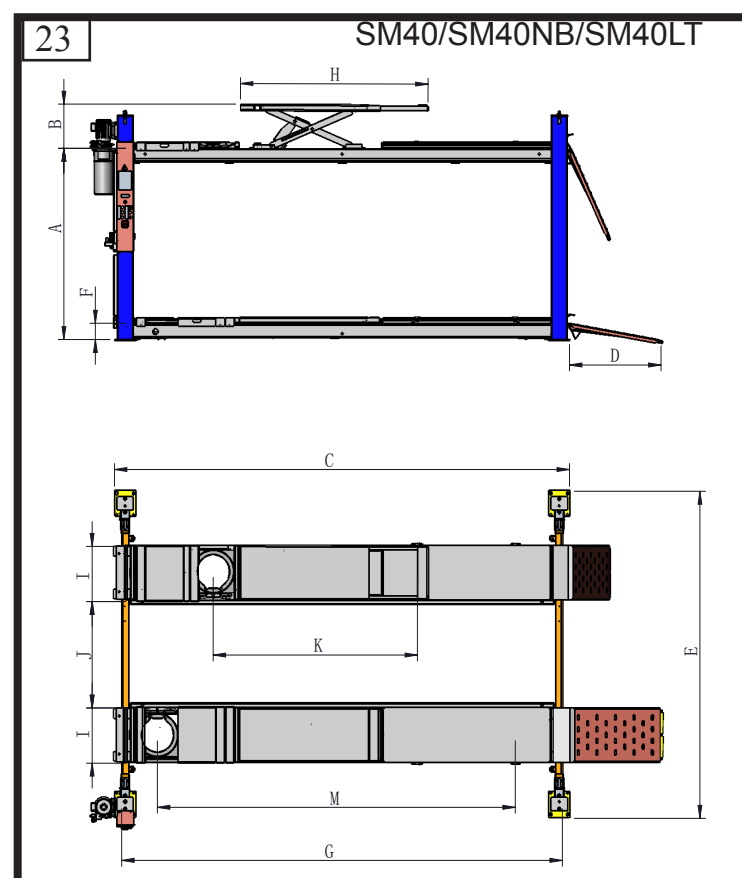



		SM65-51 SM65-55 SM65-60	SM55LT-51 SM35LT- 51MB
	Load capacity Main Lift Lifting table	6500 kg	5500 kg 3500 kg 3500 kg
A	Main lift Stroke lift without AK/FK/CK B Lifting table height Max Drive on height	1790mm 1990mm	1790mm 1990 mm 400mm 75mm
C	Overall length without drive-on ramps	5282 mm 5682 mm 6182 mm	5282 mm
D	Ramp length	1000 mm	1000 mm
E	Overall width	3397mm	3397mm
F	Lift height Min Drive on height Without AK/FK	190 mm	190 mm
G	Runway length	5100 mm 5500 mm 6000 mm	5100 mm
H	Lifting table length		1400- 2100mm
I	Runway width Lifting table width	650 mm	650 mm 550mm
J	Inner distance between runways	900 mm	900 mm
K	Min wheel base	1540mm	1980mm
M	Max wheel base For AK	4940mm 4440mm 4040mm	4040mm
N	Drive on ramp width	560mm	560mm
	Motor power rating	4 kW	4 kW
	Electrical connection	400 v, 50 Hz (3+N+PE)	400 v, 50 Hz (3+N+PE)
	Compressor connection	8...10 bar	8...10 bar
	Lift time lift	40Sec.	40Sec.
	Lift time lifting table		10. Sec

Hydraulic system operating pressure	190 bar	190 bar
Hydraulic oil tank capacity	12 liters	14 liters
Noise level	70 dB(A)	70 dB(A)
Ambient temper- ature range	0...50 °C	0...50 °C
Relative humidity range (without condensation, at 20 °C)	30...95 %	30...95 %


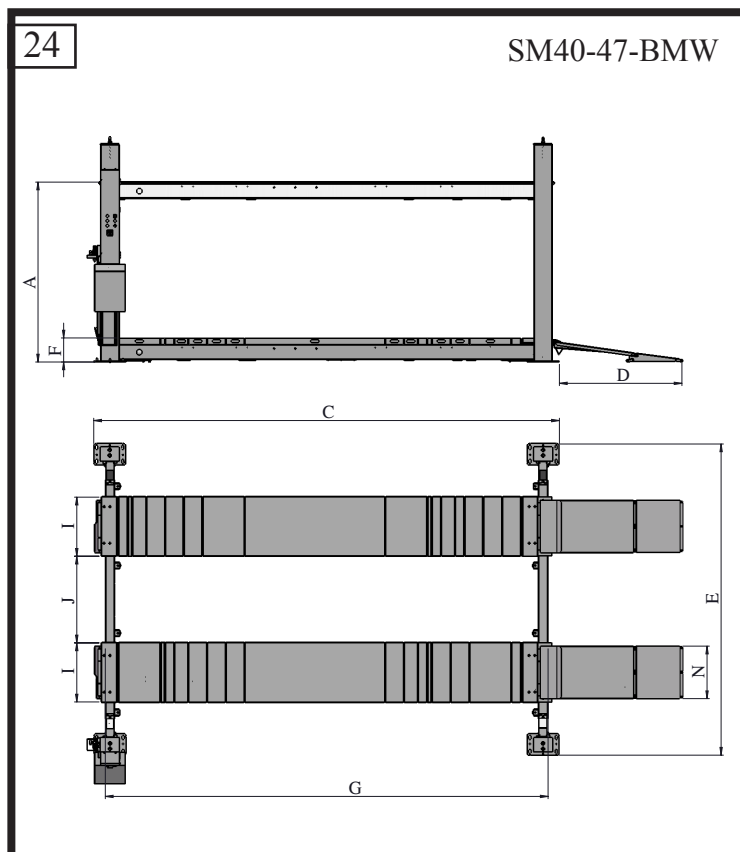


25

SM55/35LT/SM65

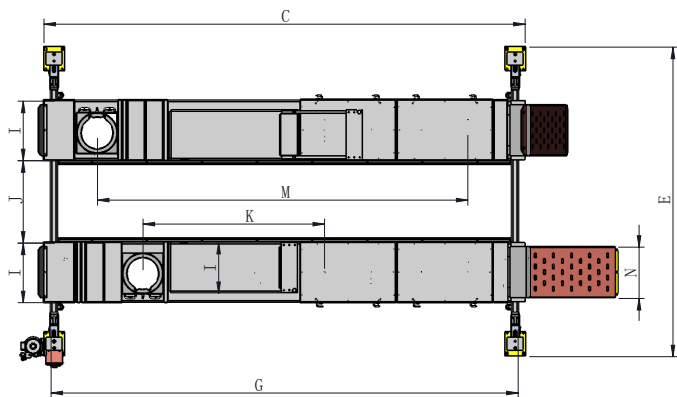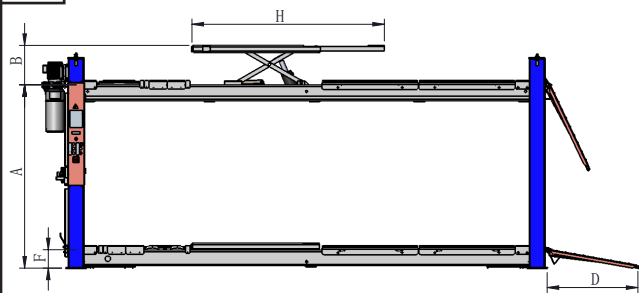

MOT40NB-47/MOT65-55/60

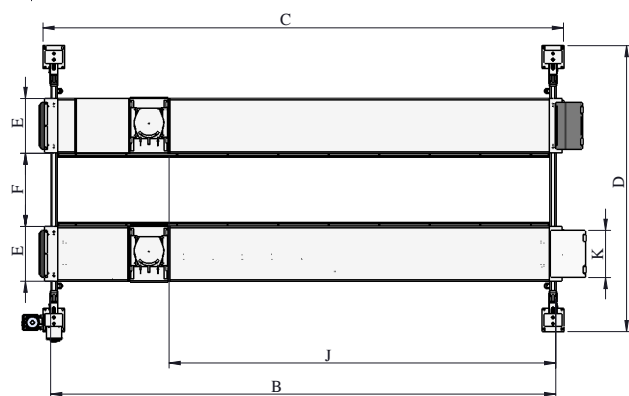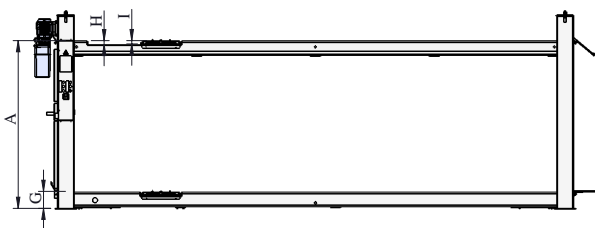

		MOT40NB-47	MOT65-60/55
	Load capacity Main Lift	4000 kg	6500 kg
A	Main lift Stroke lift height	1790 mm 1980 mm	1790 mm 1990 mm
B	Runway length	4700mm	6000mm 5500mm
C	Overall lenth (NO ramps)	4853mm	6182 mm 5682 mm
D	Overall width	3102mm	3397mm
E	Runway width	560mm	650mm
F	Inner distance between runways	900mm	900 mm
G	Lift height Min Drive on height (recess height for inground)	192mm	201mm
H	Recess Height	45mm	45mm
I	Turn table height	38 mm	38mm
J	Overall length for turn table	3388 mm	4592 mm 4092 mm
K	Drive on ramp width	560mm	560mm
	Motor power rating	4 kW	4 kW
	Electrical connection	400 v, 50 Hz (3+N+PE)	400 v, 50 Hz (3+N+PE)
	Compressor connection	8...10 bar	8...10 bar
	Lift time lift	40Sec.	40Sec.
	Hydraulic system operating pressure	190 bar	190 bar
	Hydraulic oil tank capacity	12 liters	12 liters
	Noise level	70 dB(A)	70 dB(A)
	Ambient temper- ature range	0...50 °C	0...50 °C
	Relative humidity range (without condensation, at 20 °C)	30...95 %	30...95 %



Nameplate with details of lift model, serial number, year of manufacture etc. For the position of the nameplate see → Fig. 5.



The Power unit's parameters are for reference only, the actual subject to supplier.



The min height of concrete is 200mm for SM55LT&SM65, 180mm for SM40&SM40LT ; quality of concrete min C20/25.

8.Cleaning

- Only clean the lift when not loaded (without vehicle).
- Clean main lift, lifting table and all work areas daily. In doing so, always keep all post lift components clean.



If the lift is in a particularly dirty environment, clean accordingly more frequently.

- Do not use abrasive cleaning materials on lift parts and covers. Use lint-free cloth.
- Do not use compressors or high pressure cleaners for cleaning work.
- Always consult a maintenance contractor if you identify a hazard.
- Prior to maintenance make sure that fittings and fixtures are free of oil, lubricants, and cleaning materials.
- **Cables (running steel cable) must be regularly lubricated with a suitable lubricant**, from example from Duotac, CRC or Mobil (Mobilarma 798).

This can significantly increase the service life of the cable. Lubricant can be applied by spraying, dipping, or brushing.



Do not clean cable with water. Make sure that steel cable is properly lubricated.



Lubricant is applied to the steel cables when manufactured. This lubricant is depleted when the cables are in service. And various noxious matters will stick to the surface of the cables. These will cause abrasion between cables and sheaves, and rusting of the cables. **It is important to clean and replace Lubricant to the cables periodically**

9. Maintenance and repair



DANGER

Inadequate maintenance and repair work may cause serious injury and also lead to damage to property. A safety risk as well as a risk of fatal injury exists during operation.

- ➔ Follow the maintenance and repair instructions below carefully.
- ➔ Regularly clean the post lift (→ Chapter 8).
- ➔ Comply with maintenance intervals (→ Chapter 9.3). This will keep the post lift in perfect working condition and guarantee safe operation.
- ➔ Maintenance and repair work must be documented (→ annex, maintenance schedule, regular maintenance reports, and repair reports).

9.1 Qualification of maintenance and repair staff

Maintenance and repair work may only be carried out by an authorized **maintenance contractor** (→ Chapter 2.6).

9.2 Maintenance and repair safety regulations

- Only qualified electricians may work on electrical equipment on the machine.
- Only qualified staff with specialist knowledge and experience with hydraulics or pneumatics may work on hydraulic or pneumatic equipment.
- **Ensure that you follow the instructions listed in 2, Safety.**
- When working on the hydraulics or on pneumatic equipment, ensure that you follow the safety regulations listed in the supplied power unit operating instructions annexed to this manual.
- Only perform maintenance on unloaded lifts and lifting tables.
- Main lifts and lifting tables must be lowered completely or latched into the lock positions (locking latches).
- Prevent environmental hazards:
 - Mineral-oil-based hydraulic oil is combustible and a water pollutant. It must only be used in conjunction with the relevant safety data sheet and if all specified measures contained therein are implemented.
 - Provide suitable oil drain pans and oil absorbents.
 - Ensure that no hydraulic oils, lubricants or cleaning materials contaminate the soil or leak into the drainage system.
 - Comply with local regulations for handling water pollutants, for example for absorbing leaking fluids or fluids from oil separators.
- Avoid contact with or inhalation of toxic substances such as hydraulic fluid.
- Wear protective clothing, for example protective goggles, protective gloves etc.
- Before all maintenance and repair work:
 - secure the post lift zone with a red-white chain and warning notices.
 - turn the main switch to OFF ("OFF" Position).
 - disconnect the air supply (manometer on the compressor unit to 0 bar).
 - inform all persons in the area about the maintenance and repair work.
- Only use original spare parts from the manufacturer.
- Tighten all fittings after maintenance work according to the specified torque figures.
- The default setting for safety valves must be a maximum of 10 % or a minimum of 20 bar above the operating pressure of the machine. The safety valve settings may not be adjusted.
- Remove all used materials, tools and other objects from the danger zone after cleaning, maintenance, and repair work.
- Dispose of hydraulic oils, lubricants, cleaning materials, and replaced parts in accordance with environmental regulations.

9.3 Maintenance work



WARNING

Potential crushing and shearing hazard to limbs caused by uncontrolled lowering motion.

- ➔ In particularly dirty environments, maintain the post lifts accordingly more frequently.
- ➔ Only perform maintenance on unloaded lifts, i.e. without vehicle.
- ➔ Before maintenance work lower the main lift completely or lower and latch into the lock (locking latches).
- ➔ Turn the main switch to OFF ("OFF" setting) and lock with a padlock.
- ➔ Cordon off the maintenance area to unauthorized persons (red-white chain, warning notices).
- ➔ Disconnect the air supply (Compressor unit manometer to 0 bar).
- ➔ Inform all persons in the area about the maintenance work.



WARNING

Risk to people and the environment caused by toxic substances when emptying or filling the hydraulic oil tank or lubricator (Compressor unit).

- ➔ Avoid contact with or inhalation of hydraulic oil or Vaseline oil.
- ➔ Provide a suitable oil drain pan and oil absorbent.
- ➔ Ensure that used oil does not contaminate the soil or wash away into the drainage system.
- ➔ Comply with local regulations for handling water pollutants.
- ➔ Dispose of used oil in an environmentally friendly manner.
- ➔ Hydraulic oil is highly inflammable, combustible.



DANGER

Risk of fatal injury if anchor bolts are loose. Post lift may slip, the load may collapse.


- ➔ Stop operating the post lift.
- ➔ Secure the post lift. If this cannot be done, provide an approved foundation then anchor and secure the post lift properly.

Daily inspection & maintenance


1. Cables, columns, runways and other lift parts should be kept free of corrosive agents, solvents, and road salts. If such agents are spilled or splashed on any lift component, immediately rinse thoroughly with water and wipe down with a clean rag. Spray wire rope cables as required with penetrating oil.
2. Check whether the automatic wheel chocks, drive-on ramps, or the chocks and drive-on chocks are damaged or show signs of wear. Replace damaged or worn parts.
3. Check the function of the locking latches on the main lift (visual inspection). To do so, lock the main lift in the locking latches then raise and tension the cable.

26

Acceptable, undamaged cable

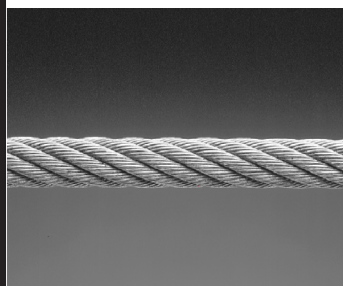


Unacceptable cable with broken strands

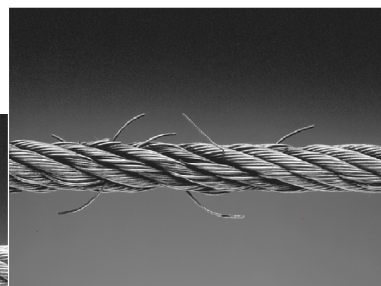

Unacceptable cable - heavily frayed



Unacceptable cable - severely contracted

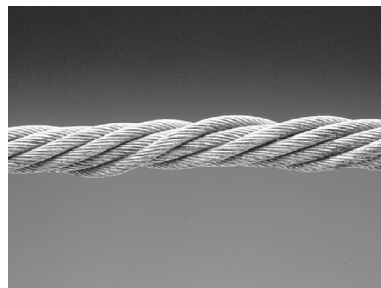

Cables normally break if they show signs some of the damage illustrated here. These tend to be damaged, frayed, overstretched, or warped cables, sometimes of different diameters.

4. Check horizontal alignment of runways. Runways must be horizontally aligned and at the same height. If not, correct the alignment (→ Chapter 13. Commissioning).
5. Check the cables and cable sheaves for wear along their entire length (visual inspection). If necessary, raise the main lift. Promptly replace damaged or worn parts with the service company.
6. Test the buzzer (→ Chapter 3.4, Pos. 1). A buzzer must also sound when lowering in the foot protection zone.



If the buzzer is faulty the post lift must not be operated.



On places without the full view on the surface of the wire rope, please use an inspection mirror and or in the dark a lamp for the inspection. If you use fingers, only with care, risk for injury.



Failure to keep lift free of corrosive agents and solvents will lead to reduced component service life, cable failure, etc., which could result in property damage and/or personal injury.


Monthly inspection & maintenance

1. Turn the main switch to OFF ("OFF" setting) and lock with a padlock.
2. Check whether the runways and lifting tables are horizontally aligned during lifting and lowering and move up and down. Re-adjust stretched cables (→ Chapter 13. Commissioning).
3. Check whether screw fittings have come loose. This applies in particular to screw fittings between drive-on surfaces and cross beams. and also check screws for slider block in each columns.
4. Check the hydraulic oil level (Hydraulic tank). If necessary, refill with approved hydraulic oil (→ Chapter 9.4) ("max" mark. Empty tank capacity 11 liters).
5. Inspect the tank cover of the hydraulic tank. The vent cap must be clean so that no vacuum can form.
Clean if necessary.
6. Check hydraulic component seals (visual inspection).
7. Turn main switch to ON ("ON" setting).
8. Check that control buttons and switches function properly.
9. Carry out a function test with and without load.
10. Complete a maintenance report (→ Annex).


Six month inspection & maintenance

1. Raise lift and lifting table.
2. Turn main switch to OFF ("OFF" setting) and lock with a padlock.
3. Lubricate post lift with approved lubricant (→ Chapter 9.4).
 - Fig. 27: 4x Cross beam grease fitting with grease press
 - Fig. 28: 4x Runways grease fitting for main lift with grease press
 - Fig. 29: 4x Lifting table grease fitting with grease press (only SM40LT)
 - Lightly grease the lifting table slides running surface
4. Check the lock nuts of the cable end of the runway, make sure all lock nut works well and not loose. (see Fig 14)
5. Latch inspection and adjustment (see next page)
6. Turn the main switch on ("ON" setting).
7. Conduct function test. Lower lift and lifting table completely.
8. Complete a maintenance report (→ Attachment).

27

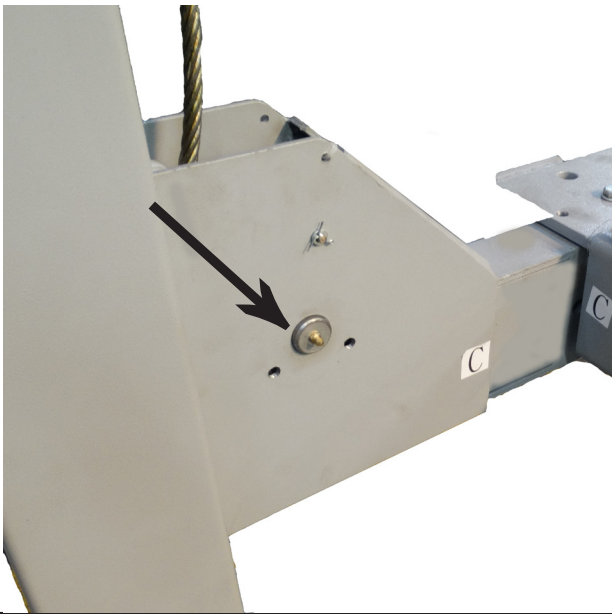

28

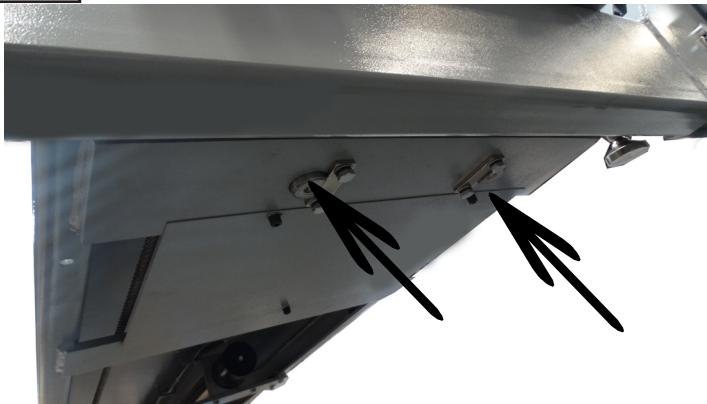

29



Latch Inspection and Adjustment

Check locking latches for proper operation. Inspect for worn or missing parts. Replace worn or damaged parts and adjust as required.



1. AIR LATCHES

Depress air valve and check latch operation on all four corners. When locks are retracted, the locking latch should pull back flush with yoke end. Adjust if required by loosening jam nuts and screwing the clevis up towards cylinder. Tighten jam nuts.

NOTE: Locking latches require 6 bar. min. to 8 bar. max. air pressure. Excessive air pressure can affect lock release mechanism and air cylinder wear.

2. LATCH and LATCH BAR LINE-UP

Observe locking latches during lift operation to ensure that all latches line up with slots in latch bar located in all four columns. If not, relocate and/or re-shim columns.

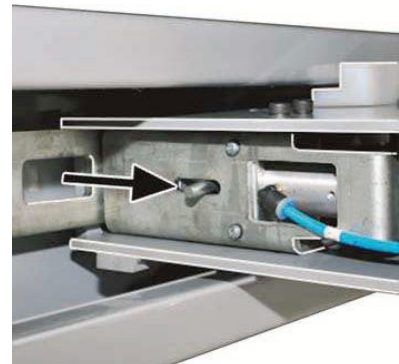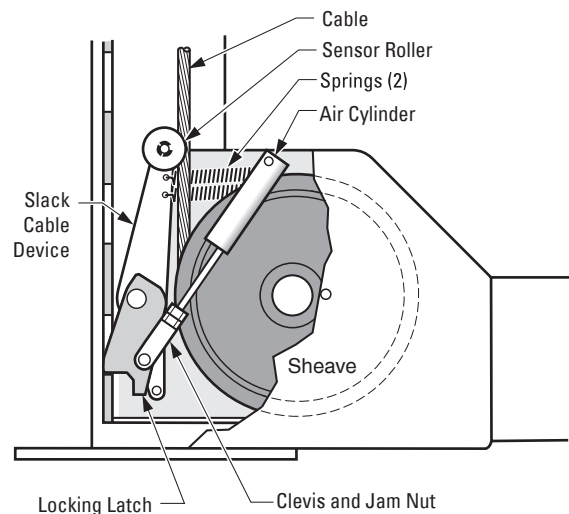


For SM40-47-BMW .the air cylinder under the crossbeam.

Annual inspection & maintenance

1. Turn the main switch off (Position "OFF") and lock with padlock.
2. Lubricate cross beam cable sheaves with grease (Consistency classification II).
3. Check Hydraulic cylinder and Hydraulic hoses for leaks (visual inspection).
4. Inspect electrical cables for damage (visual inspection).
5. Turn the main switch on again (Position "ON").
6. Check that control buttons and switches function properly.
7. Replace illegible or missing labels on the post lift. Reorder from the manufacturer.
8. Check the sheaves and pins, see detail in below.
9. Conduct safety inspections (→ Chapter 2.7).
10. Complete maintenance report and inspection report from safety inspection (→ Annex).

Depending on the level to which it has degraded

1. Change the hydraulic oil (→ Chapter 9.5).

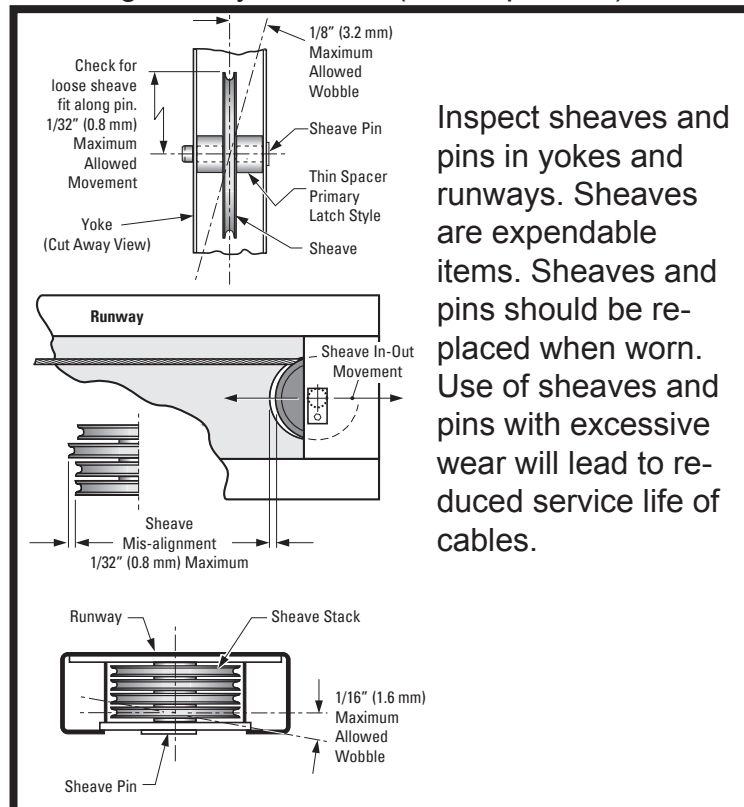

9.4 Approved hydraulic oils



Important information

- Only use hydraulic oils in accordance with DIN 51524 for the hydraulic system.
- Only use biodegradable oils (HEES-based on synthetic esters).
- Use PTFE seals or foam elastomers if the water content is high.

ATTENTION Seals may be destroyed if the incorrect hydraulic oil is used.

- ➔ Do not use rapeseed based oils.
- ➔ The water content of the hydraulic oil must not exceed 2%.
- ➔ Do not mix bio-oils with mineral oils. Mixing leads to foaming problems and corrosion damage.
- ➔ Make sure that the oil is not contaminated by any other oil or water.
- ➔ Use a proportionally lower viscosity bio-oil as a replacement for mineral oil. This improves the lubrication properties, reduces energy consumption and generates less heat.

HEES32-bio-oils can, for example, be used as a replacement for mineral oil HLP46:

- PLANTOSYN 3268
- BECHEM HYDROSTAR HEES 32
- BP Biohyd 32
- Mobil EAL Hydraulic Oil 32



Oils and grease

Only use consistency classification II oils and grease.



Water pollutants

Oils and grease are water pollutants in terms of the Water Management Act (WGH).

Always dispose of these in an environmentally friendly manner in compliance with the applicable regulations in your country (→ Chapter 16. Disposal).

9.5 Check, refill, change the hydraulic oil



Risk to people and the environment from toxic substances when filling the hydraulic oil tank.

WARNING

- Avoid contact with and inhalation of hydraulic oil.
- Wear protective clothing (protective goggles, protective gloves).
- Provide suitable oil drain pans and oil absorbents.
- Ensure that no hydraulic oils, lubricants, or cleaning materials contaminate the soil or leak into the drainage system.
- Comply with local regulations for handling water pollutants, for example for absorbing leaking fluids or fluids from oil separators.
- Hydraulic oil is highly inflammable, combustible.

1. Check hydraulic oil level on the hydraulic oil tank.




The oil level must not exceed the minimum value ("min").

2. Place the oil drain pan under the tank, remove tank cap and refill hydraulic oil to the "max" mark.
3. Ensure that the vents work and that no vacuum is generated.
4. Screw on the tank cap so that the tank is properly sealed.
5. Remove oil residues on the floor or on the lift with an approved detergent. Dispose of used cleaning cloths in the correct manner.
6. Complete a maintenance report (→ Annex).

An oil change is carried out depending on the extent to which the hydraulic oil has degraded. To do so, proceed as follows:

1. Lower all runways (main lift and lifting table completely, turn main switch off ("OFF" position) and lock it.
2. Place the oil drain pan under the hydraulic oil

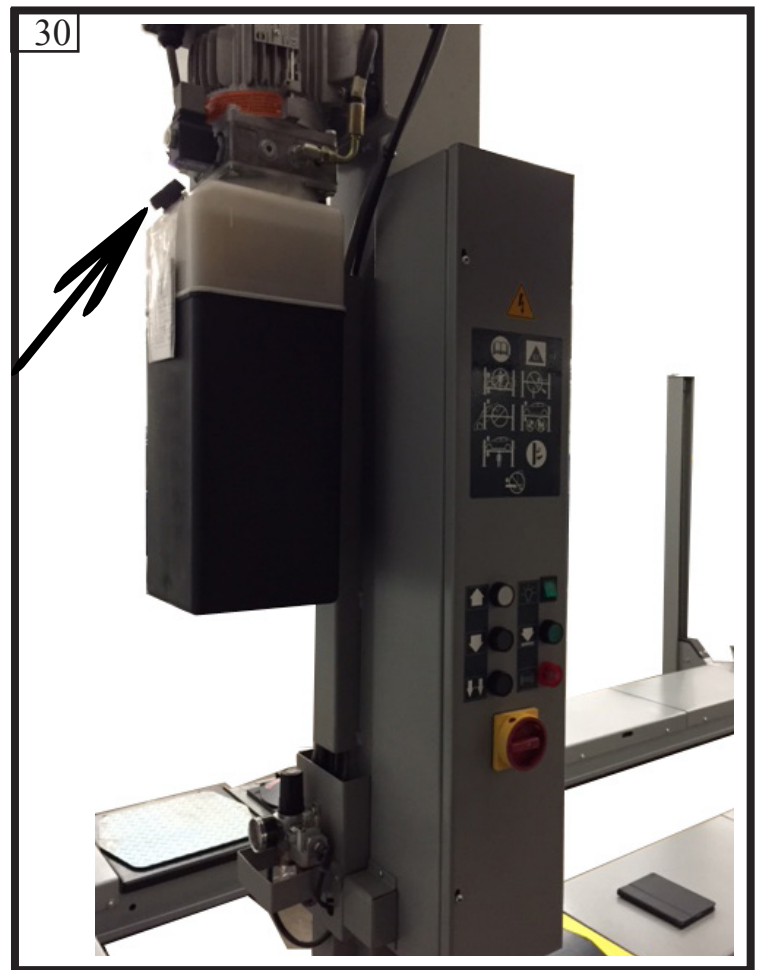

tank, completely disassemble the tank and empty out the remaining oil into the drain pan.

3. Replace the hydraulic oil tank in the correct manner.
4. Fill approved hydraulic oil up to the "max"-mark. Maximum capacity of empty tank is 11 liters.
5. On the SM40/65, bleed the main cylinder. On the SM35/40/55LT variant, bleed all 3 hydraulic cylinders.
6. Remove oil residues on the floor or on the lift with an approved detergent. Dispose of used cleaning cloth in the correct manner.
7. Turn main switch back on ("ON" setting).
8. Check that control buttons and switches function properly.
9. Carry out function tests with and without load.
- 10 Complete maintenance report (→ Annex).

9.6 Repair work (Repairs)



DANGER

If repairs are carried out incorrectly, they may cause serious injury and also lead to damage to property. A safety risk as well as a risk of fatal injury exists during operation.

- ➔ Repairs may only be carried out by trained customer service staff.
- ➔ Follow all safety regulations and warnings in this chapter.
- ➔ Always follow the repair instructions below.
- ➔ Repair work must be documented (→ Annex, inspection logbook).




Always refer to the information received during the manufacturer's training.

Changing the cylinder

1. Lower the post lift into a suitable position until all 4 latches are completely latched in the latch bars.
2. Check the latching (visual inspection).
All 4 latches must be 100 % latched and the cables unloaded.
3. Turn the main switch off ("OFF" setting) and lock with a padlock.
4. Disconnect the mains fuse and attach a warning notice preventing unauthorized reconnection.
5. Loosen the cable retainers.
6. Activate the hydraulic system without pressure.
7. Disconnect the air supply / remove fitting.
8. Change cylinder.
9. Reassemble in reverse order.

Worn ratchets


1. Proceed as above under Change cylinders, Pos. 1 to 4.
2. To safeguard against unforeseen lowering, also place suitable supports under the post lift at the lift columns.
3. Loosen the ratchet mounting screws.
4. Activate the hydraulic system without pressure.
5. Disconnect the air supply at the air cylinder fitting.
6. Disassemble the ratchet.

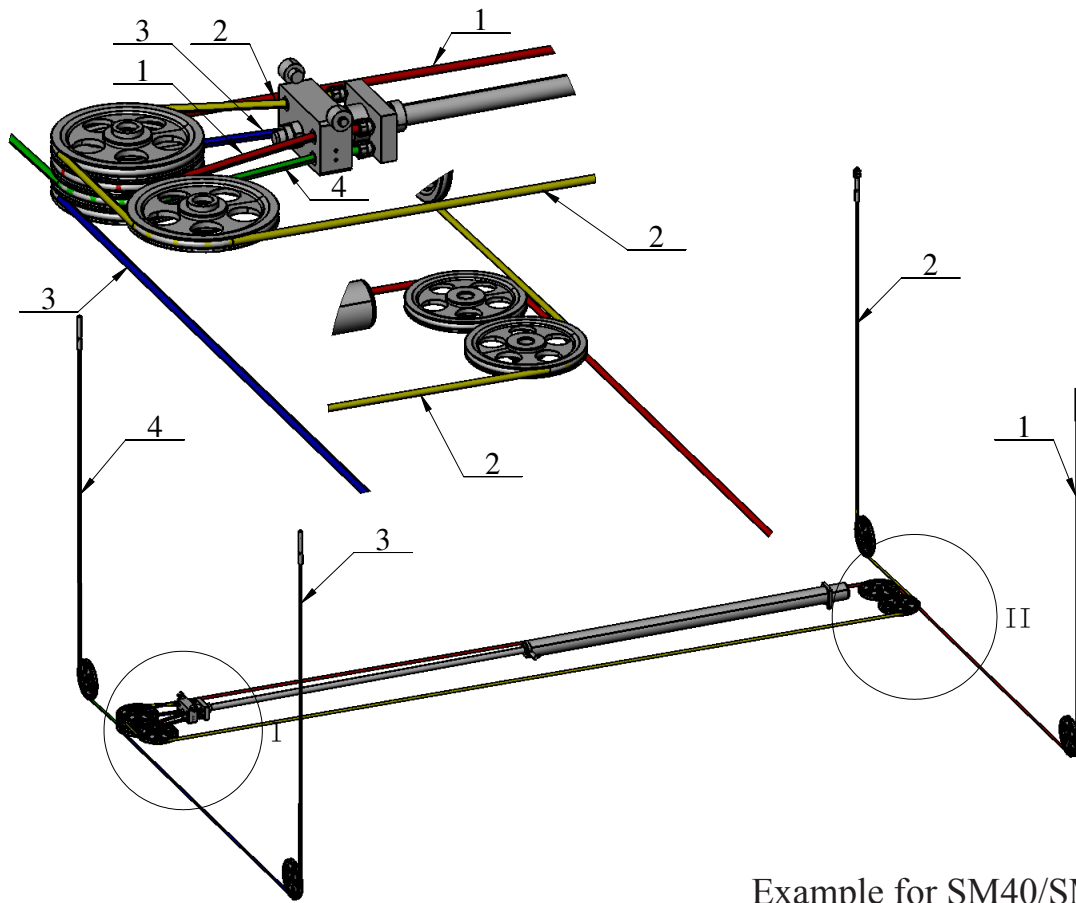

Example for SM40/SM40NB

Replace cables/cable sheaves

- Damaged cables must be replaced promptly.
- **If cables / cable sheaves are damaged, inform maintenance contractors and customer service immediately.**
- **Always replace all cables together as a set.**
- If the cable is too slack → Chapter 13. Commissioning.
- Replace cables as per the manufacturers training.

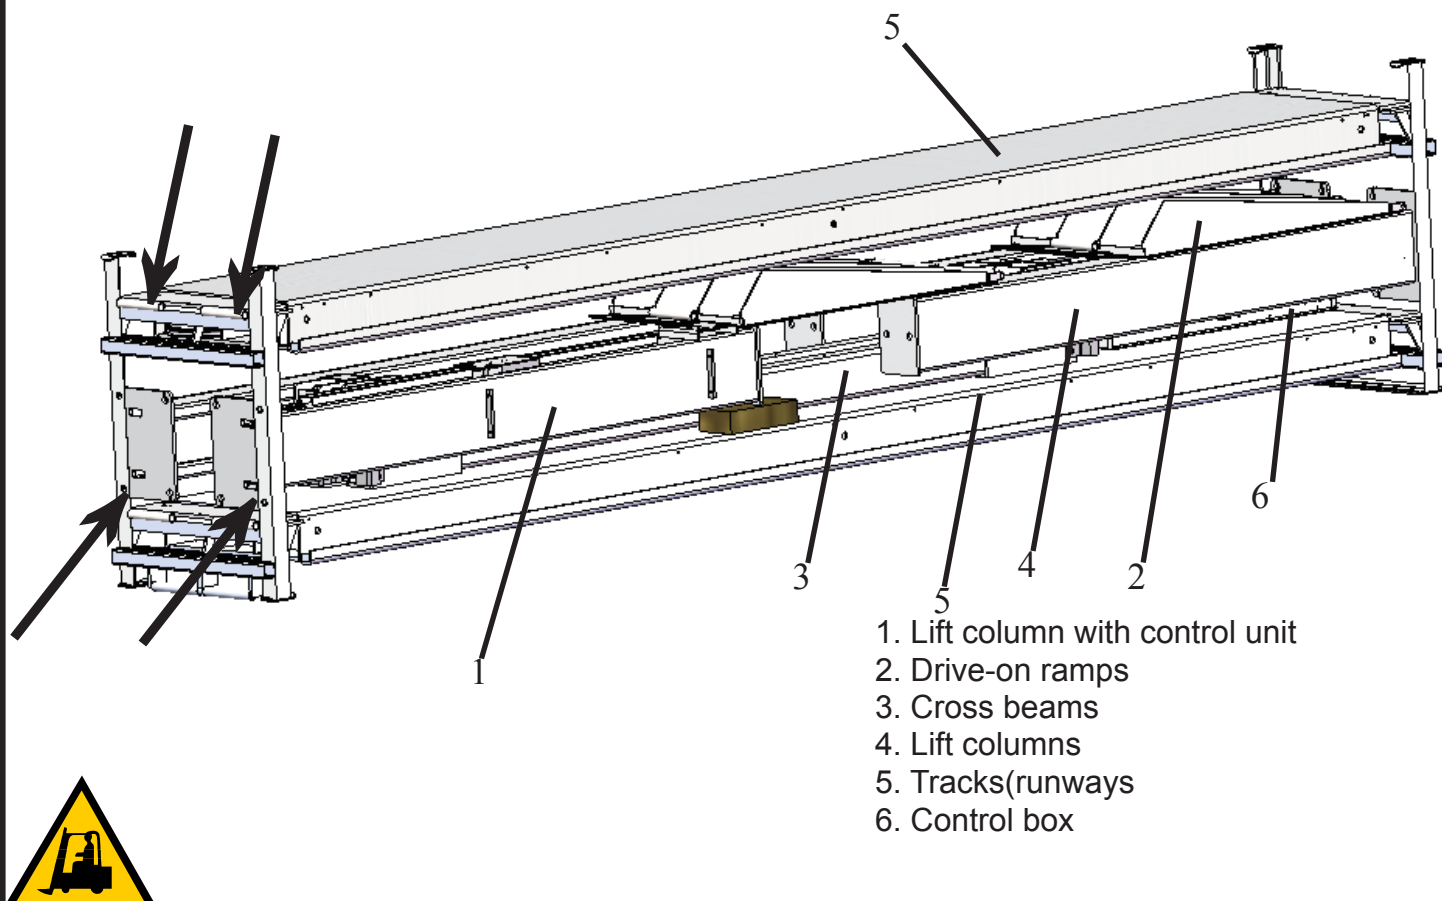

1. Lift column with control unit
2. Drive-on ramps
3. Cross beams
4. Lift columns
5. Tracks(runways)
6. Control box



10. Transport, Storage



DANGER

**Crushing and shearing hazard for limbs when unloading.
Caused by collapsing or slipping of the load.**

- ➔ Only unload the packing unit and transport to the installation site with a forklift truck or pallet jack with a sufficient load capacity.
- ➔ Only use hoists approved for the total weight (straps, chains etc.).
- ➔ Attach these so that the load cannot slip (check the center of gravity of the load).
- ➔ Only secure individual components to load-bearing parts. Always lift vertically, steadily and without jerking.
- ➔ Carry out a visual inspection before offloading.
- ➔ Do not stand close to or underneath swinging loads.
- ➔ Constantly monitor the danger zone when lifting or lowering.
- ➔ Always transport hydraulic components empty of oil.

ATTENTION Lift components may be damaged if offloaded incorrectly.


- ➔ Do not damage plates on the underside of the lift when lifting.
- ➔ Several parts are inserted into the components, for example into the runways. Offload these carefully to prevent damage.
- ➔ When offloading, proceed from top to bottom.

10.1 Transport

The lift is supplied in a packing unit (base unit) plus a separate hydraulic power unit. The optional wheel alignment kit is also supplied in a packing unit. The respective packing unit comes with the following documentation:

- Transport description giving suitable suspension points, total weight, centre of gravity, required cable lengths, transport locks, etc.
- List of all individual components included in delivery.

10.2 Offloading

1. Inspect the shipment for any shipping or transport damage. Immediately report any damage to your supervisor and to the transport firm.
 2. If there is any transport damage, contact the transport firm.
 3. Transport the packing unit to the installation site. This must conform to the approved environmental conditions (→ Chapter 7. Technical data).
 4. Unfasten the transport locks for the large parts on the front of the packing unit.
 5. Offload the runways and cross beams and set down carefully.
- 
- Recommended: Raise the runways and cross beams slightly, for example set down onto stable wood beams. This will also enable you to better route the pneumatic lines and electrical cables later.
6. Remove all other components from the pallet and set down carefully.
 7. Inspect the supplied parts according to the packing list provided.
 8. Dispose of packaging in an environmentally friendly manner, in compliance with the regulations applicable in your country (→ Chapter 16. Disposal).

10.3 Storage

Lift components must always be stored in a dry place (no corrosion protection).

Recommended Storage Conditions

- Ambient temperature: -5 ... +50
- Relative humidity, 30 % ... 95 %
with condensation, at 20 °C



The manufacturer provides no warranty for corrosion damage caused by incorrect storage.

11. Assembly



DANGER

Incorrect installation work may lead to serious injury and material damage. A safety risk as well as a risk of fatal injury exists during operation.

- Follow the instructions below carefully.
- Only customer service staff authorized by the manufacturer may assemble and commission the post lift.
- Correct installation and commissioning must be documented in the inspection logbook. To do so, use the form "Initial safety inspection before installation".

11.1 Assembly safety instructions

- Verify that the foundation is suitable before assembling.
- Think about and prevent potential sources of danger before assembly (→ Chapter 1. Intended use, improper use, incorrect behavior, and internal incident, health & safety, and environmental information).
- Operators must be able to view the post lift and the danger zone in full from the control unit (→ Chapter 3.3. Work area, danger zone).
- Refer to the technical data in chapter 7.
- Route and protect on-site power cables according to manufacturers specifications.
- Only qualified electricians may carry out electrical work on the electrical equipment of the machine.
- Only qualified staff with specialist knowledge and experience with hydraulics or pneumatics may work on hydraulic or pneumatic equipment.
- When working on the hydraulics or on pneumatic equipment, ensure that you follow the safety regulations listed in the supplied power unit operating instructions annexed to this manual.
- **Ensure that you also follow the instructions listed in 2. Safety.**

11.2 Quick assembly instructions



The lift components are already preassembled ex works. When assembling these must simply be joined together, electric, pneumatic, and hydraulic lines must be properly connected.

1. Determine the installation site of the post lift. Check the foundation. If necessary, reinforce the foundations at the point where the lift columns will be positioned.
2. Make preparations for installation. Prepare electrical and pneumatic connections. Check the foundation for unevenness and level it out. Use spacers and shims.
3. Set down both runways and prepare them for assembly.
4. Set down both cross beams and prepare them for assembly. Disassemble the cable sheaves.
5. Set up the cables. To do so, pull out the cables from the cross beams and tension them.
6. Fasten the runways to the cross beams.
7. Insert the latch bars into the latch bar brackets.
8. Stand the lift columns upright, anchor and secure to the floor.
9. Secure the latch bars and cables.
10. Attach flexible hoses.
11. Assemble the hydraulics module. Fill the hydraulics tank.
12. Connect the electrics.
13. Power up the post lift and connect the pneumatic lines (when it stops, it will automatically lock in the latch bars).
14. Carry out initial commissioning. Make minor adjustments to the post lift.
15. Fit the automatic wheel chocks, drive-on ramps and other additional components.

11.3 Site specifications

- The post lift may only be installed above ground and indoors.
- Refer to the building plans when selecting a site.
- When anchoring to the floor, take into account any pipes, cables, and supply lines lying there.
- Ensure that the load capacity of the foundation is adequate.
- Support surface for lift columns:
Reinforced concrete, concrete quality C20/C25
- Floor load capacity for each lift column (34 x 23 cm): Min. 2000 kg.
- Floor must be designed for a floor anchor.
- Concrete dimension 6500x3800x200 mm for SM65-60 without the area for ramps (for example).



Do not fit post lifts onto asphalt or a similar unstable surface, since the anchor may come loose in the floor.


- Comply with the specified minimum distances and clearances (→ Chapter 3.3. Work place, danger zone):
 - Min. work area for loading and movement: 11.5m x 4.98 m.(example for SM65-60)
 - Min. distance around sides: 0.8 m, without through traffic 0.6 m
 - Min. ceiling height / lamp height: 2.032 m + overhead clearance of largest vehicle.



Take account of the max. required hall height room height. For variants with lifting table, also factor in the max. extension height of the lifting table.



For wheel alignment lifts, take into account the vehicle or alignment system

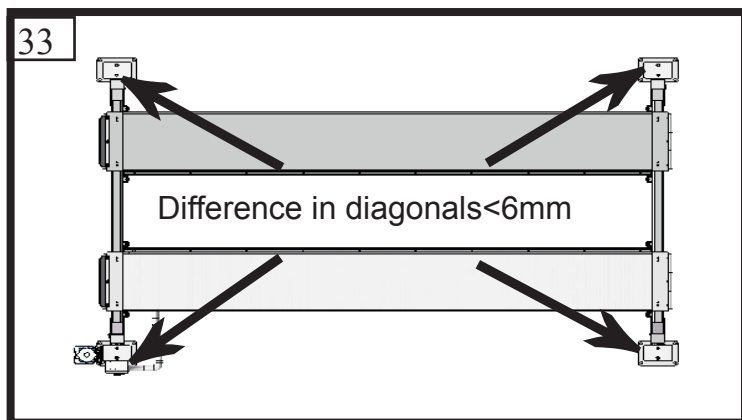

manufacturer's specifications.

- Runways must be fitted straight and level. Height tolerance ± 5 mm, max. difference between diagonals 6 mm.



Tighter tolerances are defined for the optional wheel alignment kit, according to manufacturer's specifications.

- Factor in sufficient space for the approach and drive-off. Take drive-on ramps into account.
- Take note of the maximum bearing pressure under the lift column. Take into account the weight distribution and the dead load of the lift parts.

11.4 Installation preparations




1. Provide an electrical and pneumatic outlet close to the lift column with the control unit:
 - Electrical, according to the lift variant : 400 V (3xL+N+PE), 50HZ for standard.
Cable diameter: 5x 2,5m²
Cable length: approx. 2 m
 - Pneumatic: 6...8 bar. When using a pneumatic axle jack (Optional) 8...10 bar.
2. Level out any uneven floor areas around the lift columns. If required, fill bearing surfaces for lift columns with reinforced concrete (concrete quality C20/C25).
3. Equalize slight differences in height between lift columns using spacers or shims (optional accessories).



The 4 lift columns must be leveled exactly to the same height so that the runways are horizontal. This is also important when settling the lift onto the latch bars.

Use only original spacers or shims (optional accessories)

11.5 Prepare the runways

-  Cables and sheaves are prefitted in the runways and secured by transport locks.
-  The runways can be fitted with the approach area on the left or right.
-  Always attach the fixed runway to the lift column with the control unit.


1. Set down both runways onto stable wood beams at the installation site with a distance of around 0.9 m between them.
Use the A to D markings. Label "A" of the fixed runway to the power supply.
2. Pull out the cables and pneumatic lines on the front ends of the runways. These must be rolled in under the runways and secured).(see fig 31)
3. Insert the cables into the cable sheaves of the runways. Make sure they are correctly positioned in the cable sheaves.
4. Lubricate the cable sheave grooves on both front ends of the fixed runways (for grease see Chapter 9.4).
5. Insert the fitting (metal guard) for flexible hoses from inside and outside into the fixed runway and tighten.



11.6 Prepare the cross beams

1. Position both cross beams under the runway beams at the ends of the runways. Make sure that markings A to D match up.
2. Pull out the cable sheaves on the right and left of the two cross beams.

3. On each axle (1), disassemble the screw (2) and the distance sleeve(4) and take out the cable sheave (3).

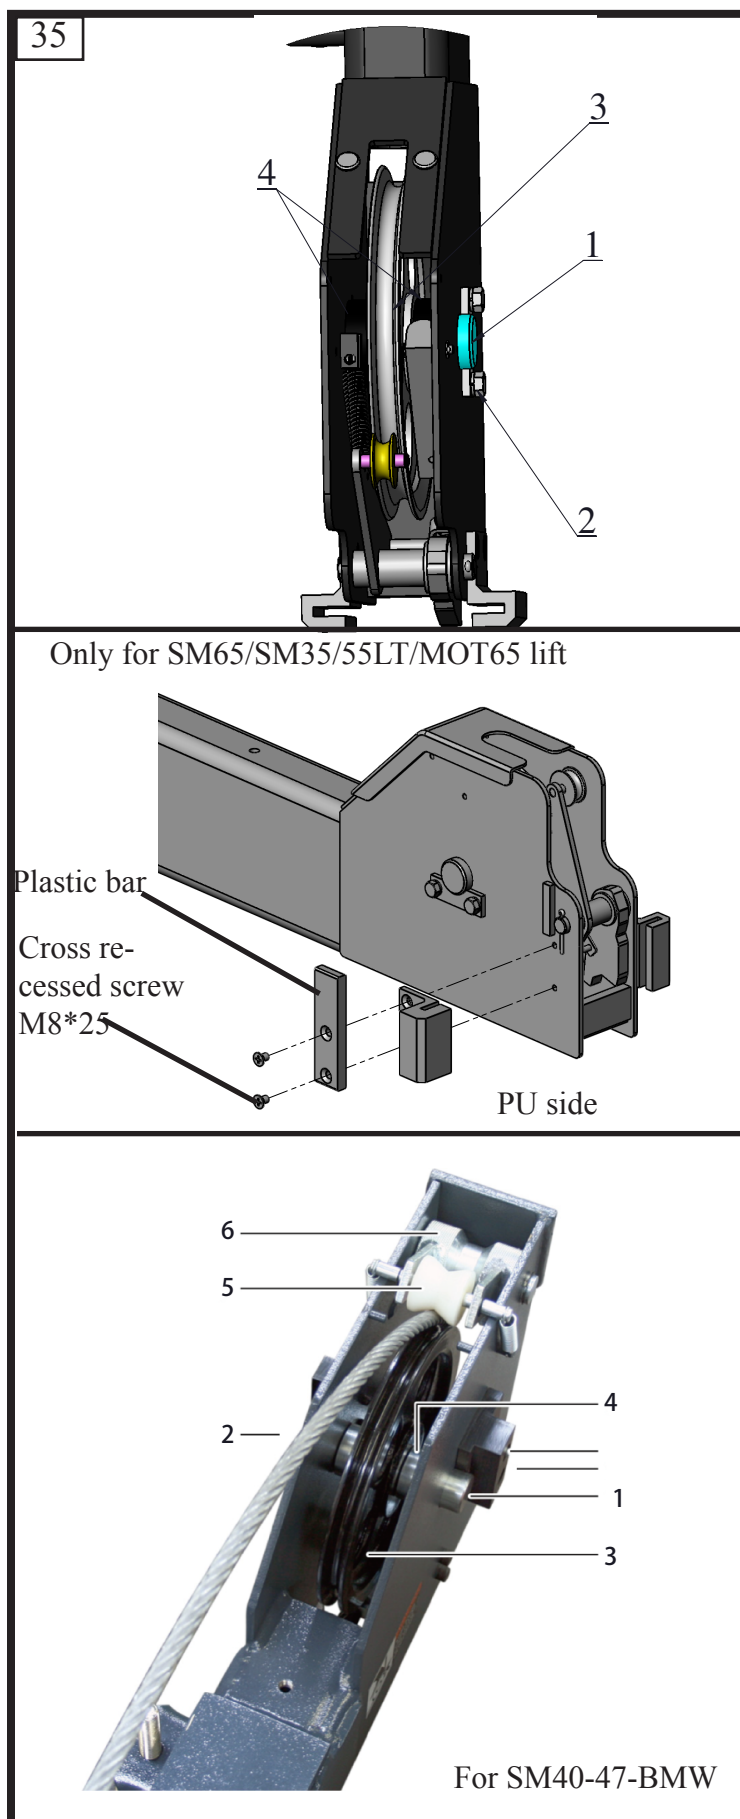

34



4. Route the cable assembly with the electrical, pneumatic, and hydraulic lines through the fitting (Fig. 34).
5. If the optional lighting is used, route the lighting power cable into the cable conduit of the runways and cross beams and through the fitting (Fig. 34).
6. Connect the pneumatic lines of the adjustable runway to the two T-connectors (→ Pneumatic circuit diagram).
7. For variants with lifting tables:
Route the hydraulic line of the slave runway in the cross beams and through the fitting (→ Fig. 34).

11.7 Set up the cables

1. Pull out the 4 cables according to the cable diagram through the cross beam and route them out of the cross beams. They must protrude from the cross beam by about the same distance.

ATTENTION Malfunction if cables are crossed or slack.



➔ Ensure that the cables are pulled tight within the cross beam and are not crossed.

2. Fit the cross beam cable sheaves (→ Fig. 35). To do so, insert the cable sheave and the distance sleeve into the cross beam for each cross beam.

11.8 Fasten the runways to the cross beams

36

Bolt M10*25 for SM40
Bolt M10*50 for MOT40
Bolt M12*30 for SM65/MOT65/SM35/55LT

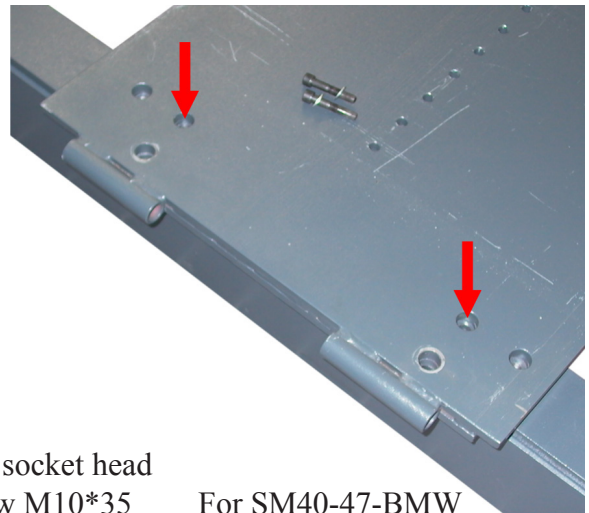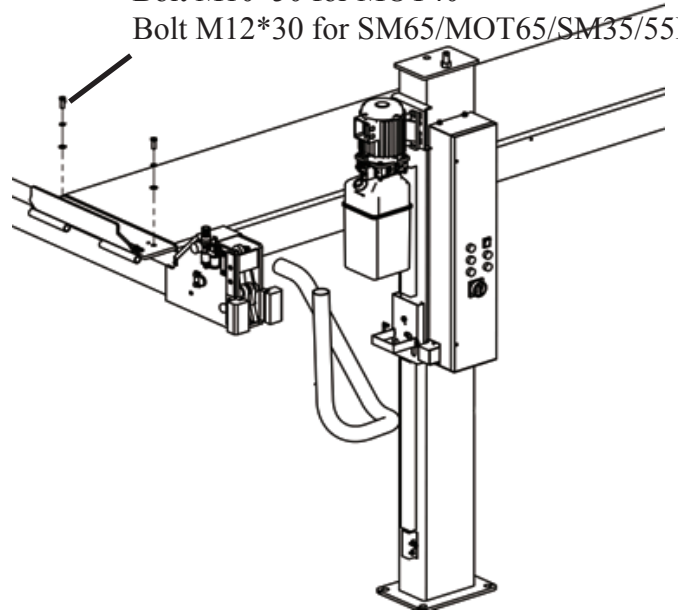

1. Align the runways with the cross beam mounting holes at the front and back. In doing so, make sure that the cables and lines are in the correct position. Cables must not fall out of the grooves of the sheaves.
2. Check the difference in length between the two lift diagonals (between the corner points of the cross beams). Maximum allowed difference between the two diagonals = 6 mm.(see Fig33)
3. Fit the two runways to the cross beams with the supplied bolts (see Fig. 36).

Tightening torque table in Nm where $\mu = 0,12$

Thread	Property class			
	5.6	8.8	10.9	12.9
M 4	1.3	3	4.6	5.1
M 5	2.7	5.9	8.6	10
M 6	4.7	10.1	14.9	17.4
M 8	11.3	24.6	36.1	42.2
M 10	22.9	48	71	83
M 12	39	84	123	144
M 14	62	133	195	229
M 16	96	206	302	354
M 18	133	295	421	492
M 20	187	415	592	692


4. Check diagonal length. Correct the alignment if necessary.

11.9 Assemble the lift column

Proceed as follows on all 4 lift columns.

Make sure the lift column with the control unit is correctly positioned.

1. Set down the lift column onto the assembly position with a forklift truck.
2. Slide the lift column from the back onto the crossbeam and align approximately with a plumb line.
3. Equalize greater differences in height with shims (→ optional accessories). Make sure there is no differences in height between the lift columns (max. height difference between the 4 lift columns = 5 mm).
4. Fasten the right and left slider blocks G to the lift column each with 2 bolts. Then slide the latch bar into the slider blocks.

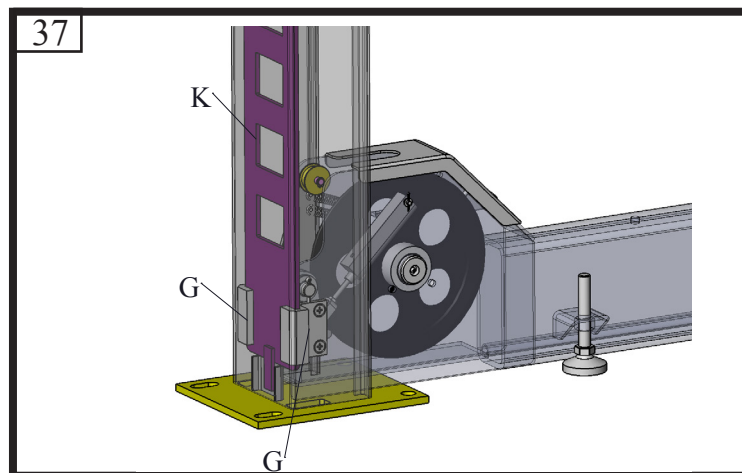

Make sure the bolts for the slider block G are tight all the time, when you install it ,please add thread-locking adhesives.

5. Mark the 4 anchoring holes on the floor and for each lift column and drill (\varnothing 16 mm, 130 mm deep). Clean the drill holes.


6. Insert all 16 anchor bolts into the holes. Use a rubber mallet if necessary.

Approved anchor bolts


Manufacturer	Type	Thread
MKT	Anchor bolt BZ plus	M16
MKT	Anchor bolt BZ plus A4 or HCR	M16
MKT	Injection system VMZ (chem.)	105/M16 125/M16 145/M16
HILTI	HVZ (chem.)	M16x105
HILTI	Through bolt anchor HST, HST-R and HST-HCR	M16
Fischer	Anchor bolt FAZ II	M16
Fischer	High-bond anchor FHB II (chem.)	M16x95
Würth	FAZ	M16

Anchor bolt clamping zone

i The clamping zone for these anchor bolts is the sum of the non-bearing flooring plus the thickness of the column base plate of 10 mm.

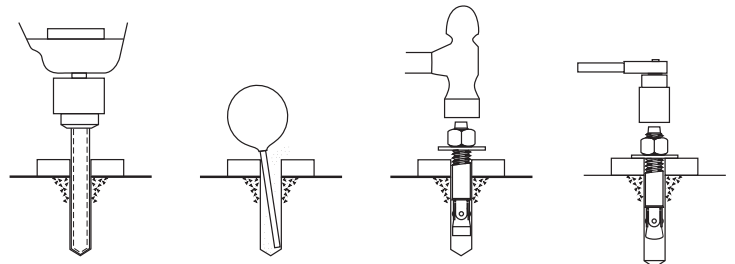


Drill holes Clean holes Run nut down just below impact section of bolt. Drive anchor into hole until nut and washer contact base. Tighten nut with Torque wrench

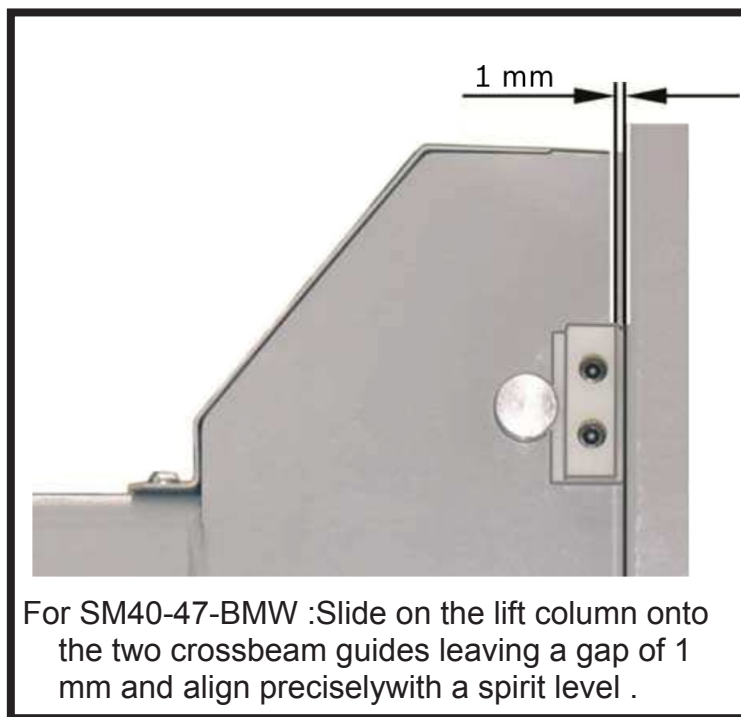

7. Fit the 4 lift columns onto the shims with approved nuts and bolt locking devices. Select the tightening torque according to the bolt manufacturer's specifications. Also consider the on-site conditions.

11.10 Attach the latch bars and cables

Proceed as follows on all 4 lift columns.

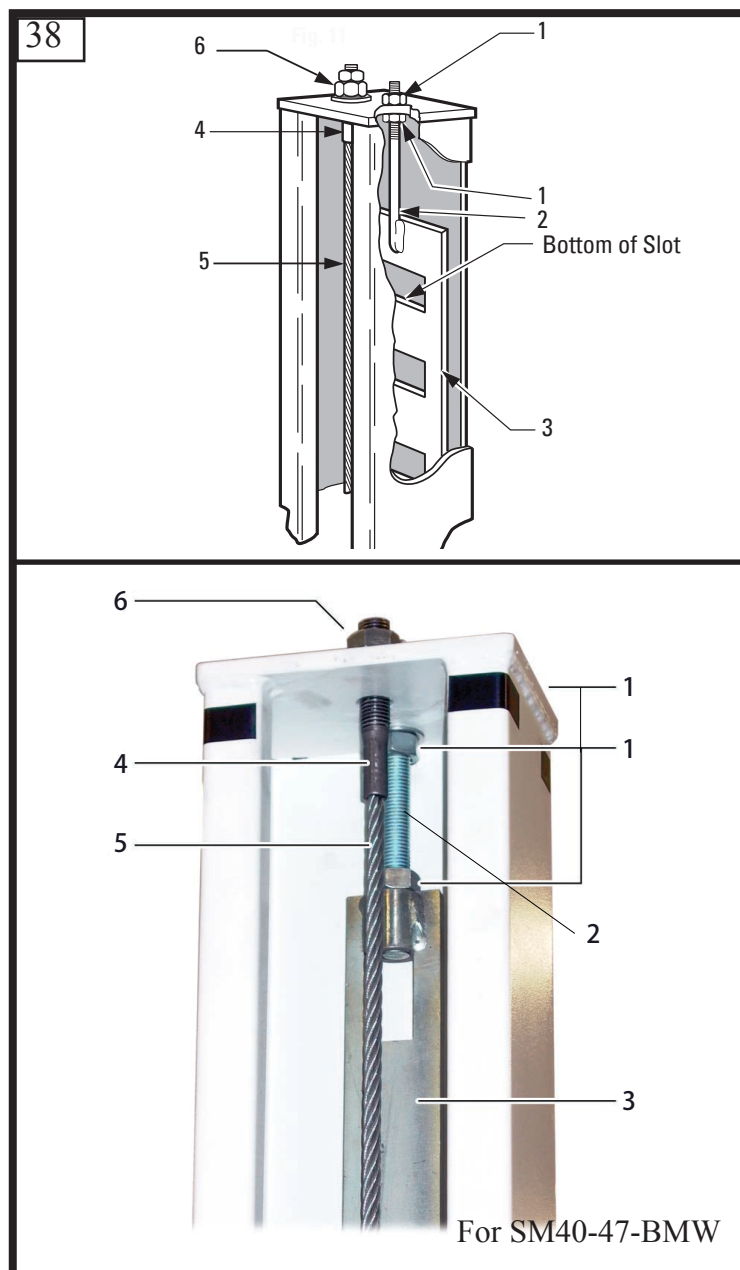

1. Insert the supplied threaded pins (2) from above through the top plate of the lift column and attach using 2 lock nuts (1) for each pin
2. Insert the threaded pin (2) from above into the latch bar.
3. Adjust the latch bar (3) using the hex nuts (1) in such a way that it lies in a circular recess on the floor but does not make contact with the floor.
4. Tighten the hex nuts at top and bottom slightly,

5. Lock at the top using the M20 lock nut.
6. Screw the threaded sleeve (4) for the cable (5) into the top plate from below so that the cable is lightly tensioned. Do not yet secure the cable.
7. Secure the threaded sleeve at the top with an M20 lock nut(6).

11.11 Attach the flexible hose

39

Step8.2



Step8.1

8. Use 4 screws to mount the control box to the main lift column. then Route the cable assembly with the electrical, pneumatic and hydraulic cables through the flexible hose into the control box.
9. Make sure that the flexible hose sits securely in the metal fitting of the fixed runway.
10. Then tighten the 2nd metal fitting on the control box.

11.12 Assemble the hydraulics module

- Only qualified staff with specialist knowledge and experience of hydraulics may work on hydraulic equipment.
- Always follow the safety regulations in the hydraulic power unit instructions in the annex to this manual.

The hydraulic power unit with motor and tank is supplied separately and is assembled as follows:

1. Screw the 4 threaded pins with rubber pads (2) into the lift columns.




Risk of injury from heavy hydraulic power units.


➔ If possible, assemble the complete unit in pairs.

2. Attach the complete hydraulic power unit(4) to the top of column with the mounting plate (3), fit washer(5) and secure with spring washer(6) and nuts(7).

40.1

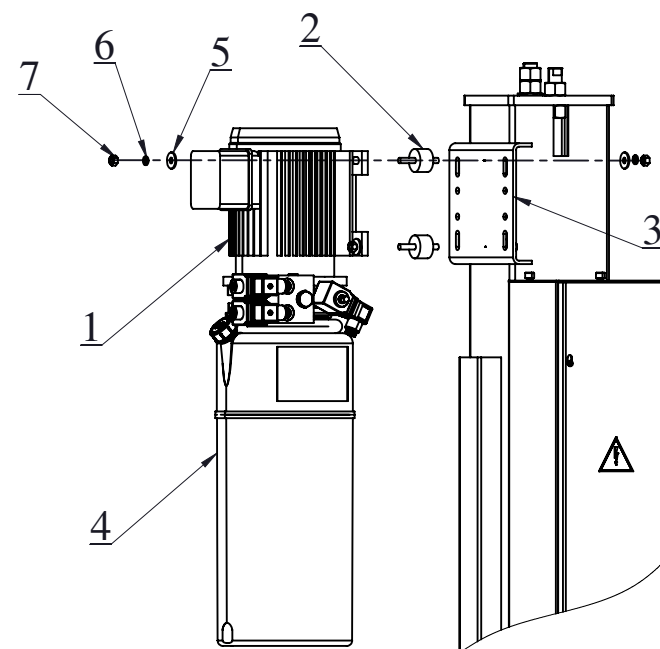

40.2

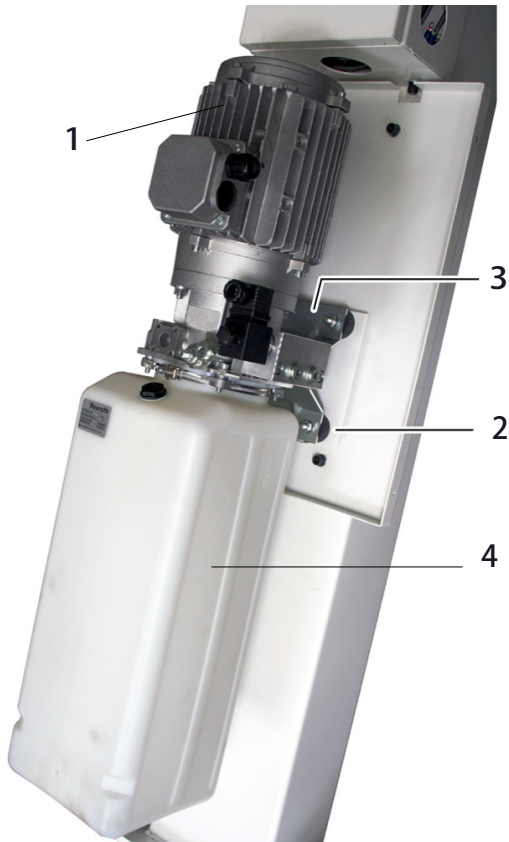


For SM40-47-BMW: first mount the power unit cover under the control cabinet.


3. Connect the supply lines (Fig. 41/42, arrow) to the hydraulic block.

- SM35/40/55LT with 2 emergency manual valves
one fitting for main lift
one fitting for lifting tables.
- SM65 with 1 emergency manual valve

41

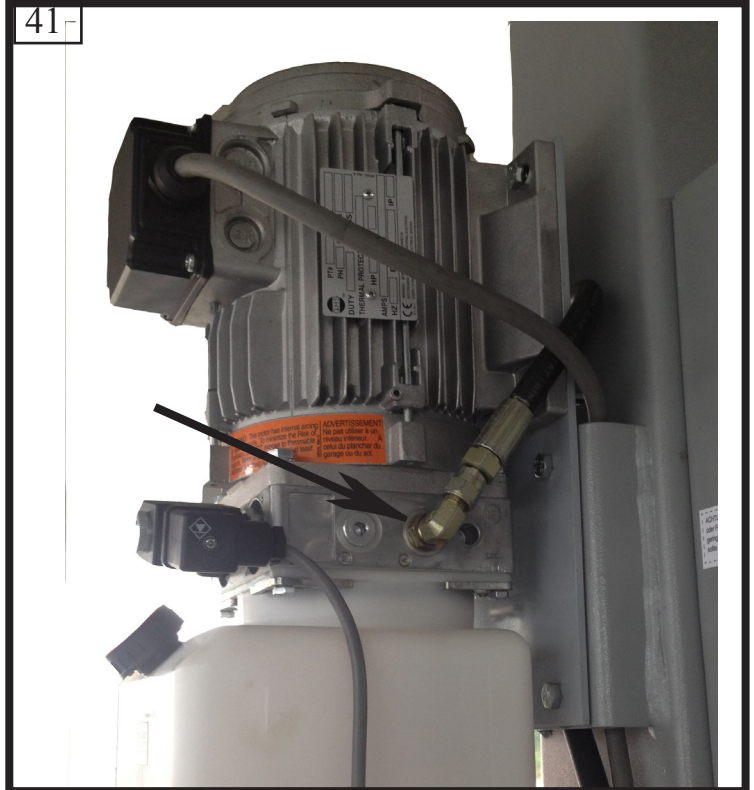


42

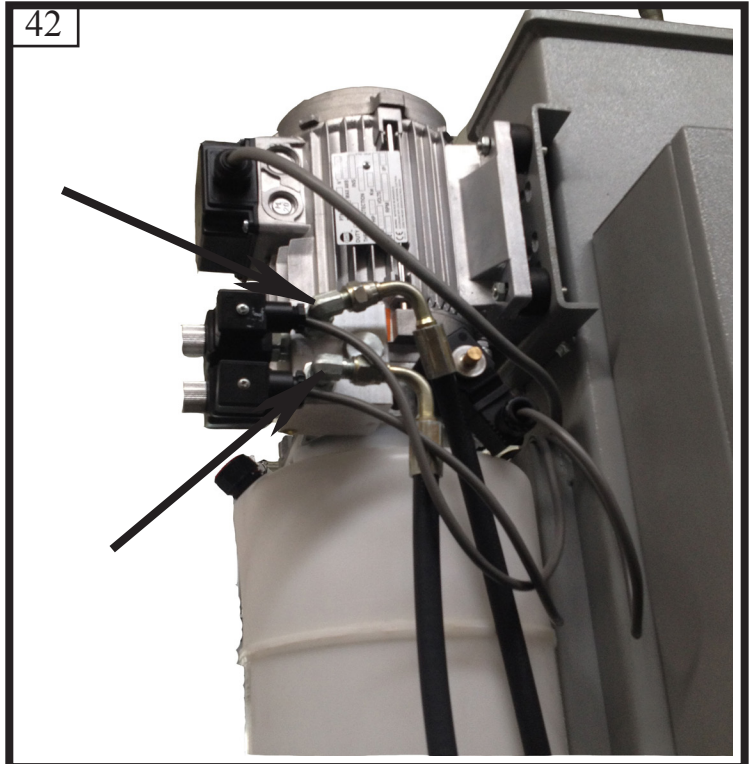

4. Open the tank cap and fill the tank with 11 liters of hydraulic oil. For approved hydraulic oil types, see Chapter 9.4.

11.13 Assemble the pneumatic compents

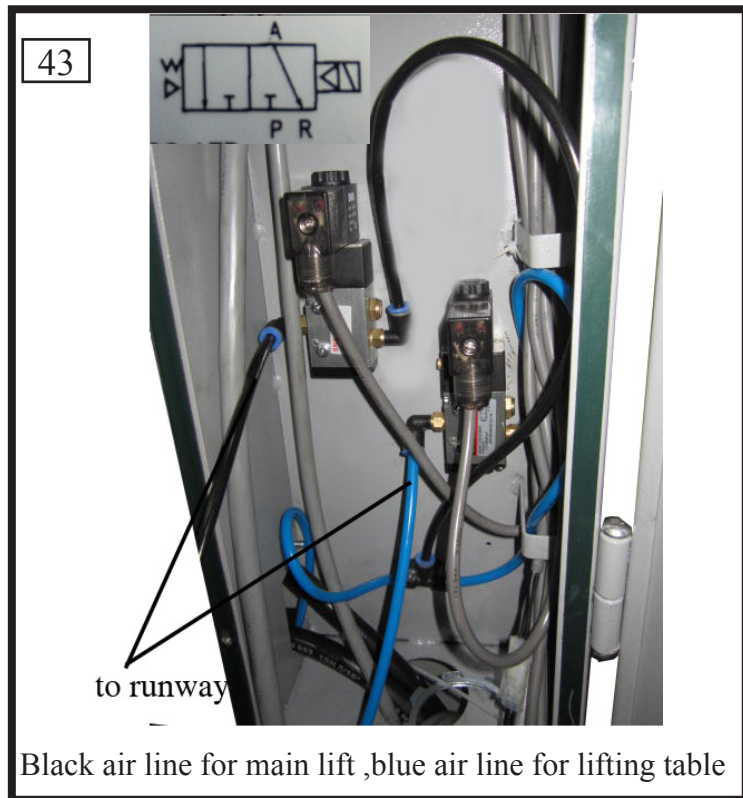

- Pneumatic connection work may only be carried out by qualified electricians.
- For LT lift with 2 air valve ,one air valve with black air hose for main lift ,and one air valve with blue air hose for lifting table. (→ Annex,pneumatic circuit diagram)
- Assemble the Air maintance(2) with screws, connect the air hose (dia 6 mm)from control box using fitting (3), air supply (dia 8mm)from workshop using fitting (4),at last using the black plastic cover(1) to cover all cables,hose,air hose with screws(5) two side of column.

12.Electrical connections



DANGER

Risk of electrocution. Faulty electrical work may lead to critical injury and also to damage to property.



Always follow the instructions below.
Proper installation and commissioning must be documented in the inspection logbook.



Use the form "Initial safety inspection before installation"

12.1 Safety instructions for connecting power cables

- Electrical connection work may only be carried out by qualified electricians.
- Before commissioning, check the mains voltage of the building wiring. This must match the specified post lift voltage (→ see Annex or wiring diagram in the control box).
- The connection to the mains supply must be hard-wired!
The mains supply cable from the fuse box to the control box of the post lift must be hard-wired according to the wiring diagram. No plug outlets must be used.
- The motor is designed for clockwise phase rotation. The direction of rotation must be checked during connection (if necessary, reverse the polarity!).


- A motor protection switch designed for rated current and rated voltage must be fitted as over-load protection. This must be provided by the lift user (not supplied).
- All leads/cables/hoses must be routed in cable conduits. Trip hazards must be avoided in the traffic and work zone.
- All main switches must be switched to "O" when working on the electrics of this machine. The mains power supply must be disconnected at the fuse box (disconnect the mains fuse) and isolated to prevent accidental reconnection. A clearly visible warning sign must be attached accordingly.

12.2 Connect the lift power supply

1. Disconnect the mains fuse and attach a sign warning against reconnection.
2. Connect the cable assembly terminals to the corresponding connectors. The connectors are coded so that only matching terminals can be connected.

Connect 4 terminals to main lift, one terminal for lifting table.
3. Feed the hydraulic supply lines and power cables from below through the lower knock-out in the control box and connect to the hydraulic power unit (→ Annex, Power unit operating instructions, hydraulics diagram).
4. Check the voltage, current and power ratings on the information plate. Make sure the approved structural conditions for connecting the power cables are in place.
5. Remove the motor connection box cover and route a 4-core power cable through the cable gland into the connection box accordingly.

45

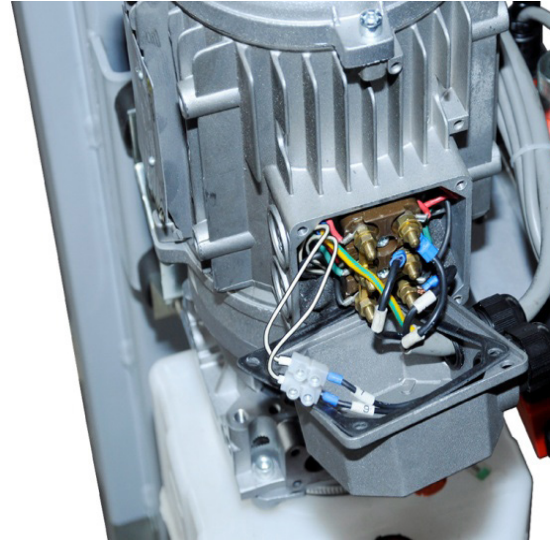


6. Establish a mains connection (→ Fig. 45 and 46)

- Standard configuration with 400 V connection (3L+PE): W2 – U2 – V2 bridge.
- Alternatively 3 x 230 V- connection: Change the wiring on the transformer (→ arrow, Fig.47) to 230 V.

Remove the six M5 nuts in the motor connection box, bridge U1–W2, V1–U2, W1–V2 according to the diagram and tighten the nuts again.

7. Make sure that the equipment is properly earthed. Do not connect the earth conductor to gas, water, or telecommunications installations.
8. Attach the motor connection box cover.
9. Check the direction of rotation of the motor (see also direction of the arrow on the motor). To do so, close the control box, connect the mains fuse, turn the main switch to "ON" and push the Up button. Reverse the polarity if the direction of rotation is incorrect.

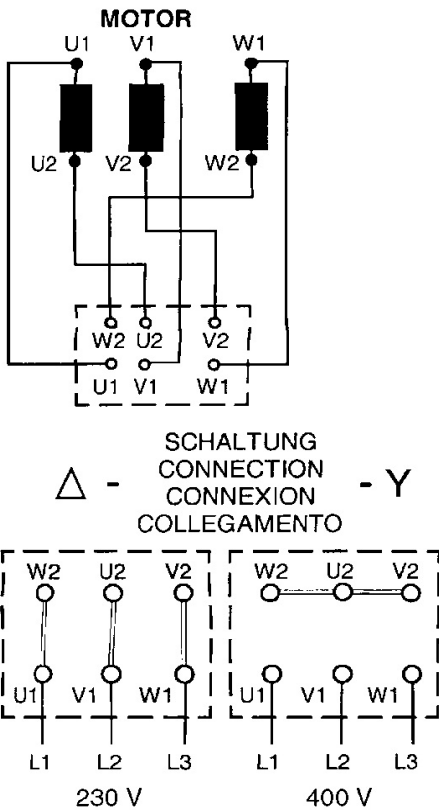

13. Commissioning

13.1 Test the pneumatic and hydraulic system

The pneumatic connections must be established on-site by the user.


1. Only connect the pneumatic line to the pneumatic female coupler.
2. Set the air pressure on the manometer to 6 .. 8 bar.
3. Set the main switch to ON.
4. Move the unloaded lift to full rise and the bottom position several times using the Up and Down buttons. This will completely remove any air pockets in the hydraulic system.
5. For variants with lifting table , move the unloaded lifting tables up and down several times.
6. Carry out a visual inspection of the hydraulic and pneumatic system. In doing so, check all lines, especially the couplings. No leaks must be found.
7. Lower the lift and lifting table completely and check the hydraulic oil level. This must also correspond to the maximum level.
8. Finally check that the hydraulic and pneumatic hoses and components are fitted securely.

13.2 Test the safety mechanism

Test the “Lower in the danger zone” Function

1. Raise the main lift around ½ m with the Up button.
2. Push the Down button. The lowering process must stop at a height of around 120 mm (foot protection).
3. Push the Down button and Lock button together until the main lift has been lowered completely. A buzzer sounds constantly during the lowering
4. Test the safety shut-off for the lifting table in the same way.

54 Test the "Anti-Misalignment" on the lifting tables

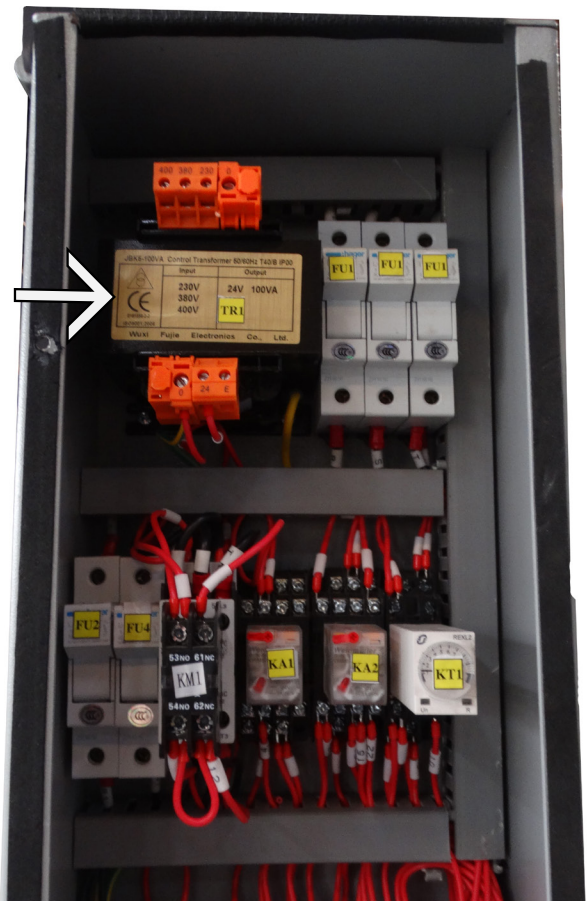

5. Raise the lifting tables with the Up button.
6. Mask the photosensors between the runways.
7. Push the Down button (whilst turning the selector to main lift and lifting table respectively).

The Down function must be deactivated. Neither the main lift nor the lifting table may be lowered.

8. Remove the adhesive strips on the photosensor.

Test the "Slack cable" function

9. Lock the main lift to the latch bars with the Lock button. Press the button until the cables are completely slack.
10. Push the Electronic Alignment Control button (→ Chapter 6) together with the Up button until the cables are tensioned and the buzzer switches off.

Test the "broken cable" function

1. Ensure that no vehicle is on the lift or the lifting tables (lift unloaded).
2. Raise the main lift by around 1 m with the Up button.
3. Place a wood block under a cross beam directly next to a lift column and lower the main lift with the Down button.
4. Lower the main lift onto the wood block, until the lift column cable is slack.

The lowering process must now automatically stop and the locking latch (lock cams into the latch bar) must engage.

An alarm sounds. All functions on the control unit, with the exception of the Rolling Jack Down function must now be out of order.

5. Push the Electronic Alignment Control button (→ Chapter 6) together with the Up button until the cable is tensioned again and the buzzer switches off.
6. Now carry out the test (steps 2 to 5) on the other lift columns.

13.3 Align the lifting tables


1. Ensure that no vehicle is on the lift or the lifting tables (lift is unloaded).
2. Test the alignment function as in Chapter 6.

13.4 Leveling the main lift

Use a spirit level, an automatic level and marker discs on the driving surfaces for adjustment work (positions A and B), → Figure 50.

Make fine adjustments to lift columns

3. Ensure that no vehicles are on the lift or the lifting tables (lift unloaded).
4. Using the spirit level, check the vertical alignment of the lift columns. If skewed, carry out the following steps.

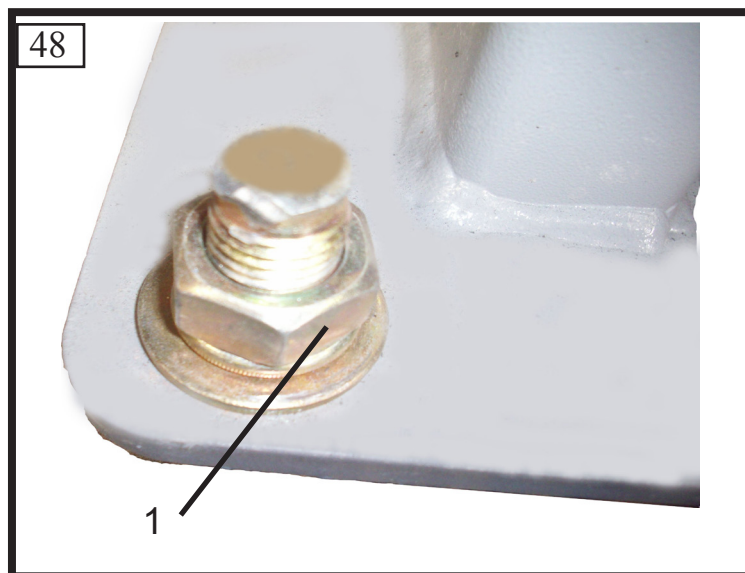

5. Loosen the nuts (1) and align the lift precisely with the shims. In each case, place shims underneath.





When aligning the lift columns, push against the cross beam so that there is a gap of 0.5 mm between the two guides and cross beam. Then place shims underneath.

6. Tighten all 4 anchor bolts with the corresponding torque (→ Chapter 11.8. Tightening torque table).

Fine adjustments to the latch bars and cables

1. Ensure that no vehicle is on the lift or the lifting table (lift is unloaded).
2. Raise the main lift by around 1 m with the Up button.
3. Lock the main lift into the latch bars with the Lock button. Make sure that it latches into all 4 latch bars.
4. Switch main switch to OFF.

49

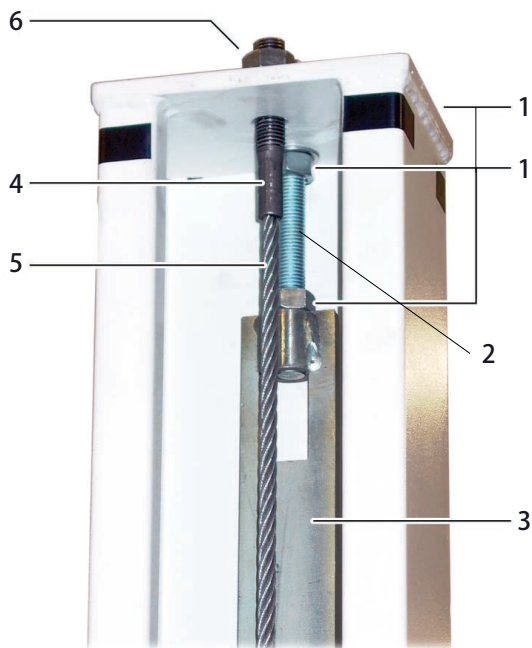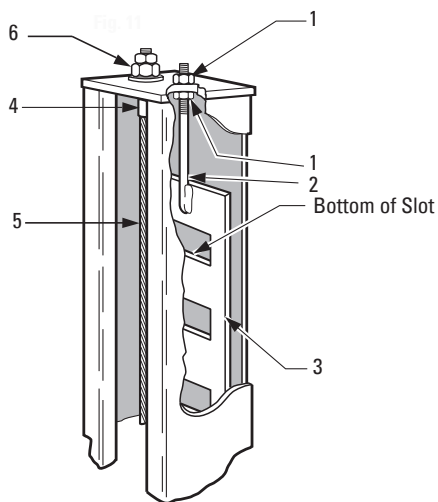


For SM40-47-BMW

5. Remove the top nut (6) of the cables.
6. Adjust the threaded sleeves (4) of the cables (5) on all 4 lift columns so that the cables are completely slack.
7. Loosen the lock nut (1) of the latch bars.
8. Place markers A and B on the driving surfaces.
9. Using the automatic level, measure the distances between markers A and B for each lift column.
10. Using the adjusting nuts (1) adjust all 4 latch bars so that the two driving surfaces are aligned with a crosswise height tolerance of: ± 1 mm and diagonal tolerances of ± 2 mm.
11. Tighten the adjusting nuts (1) of the 4 lift columns (lock them).
12. Then secure the lock nut(1) at the top .
13. Tension the threaded sleeves (4) of the cables (5) on the 4 lift columns slightly.
14. Turn the main switch to ON and lower the main lift to the floor.




The lifting tables are already height adjusted .
ex works and do not need to be leveled.

50

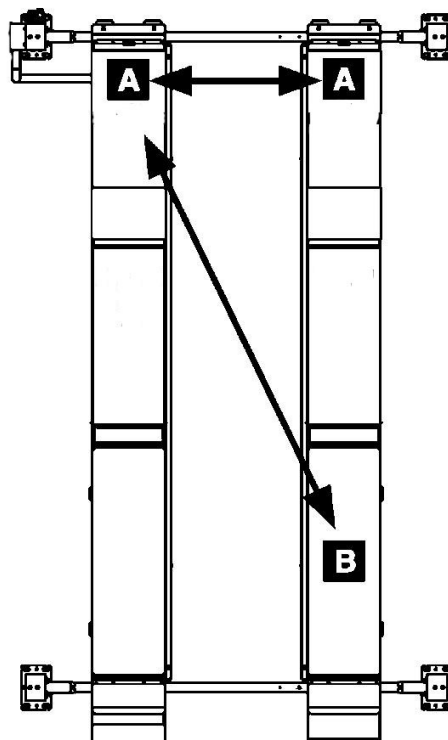

Adjust the cables

1. Drive a vehicle with a total weight of 2000 kg centered onto the main lift. Make sure that the vehicle is also centered laterally on both runways.
2. Push the Up button until all cables are tensioned and the acoustic alarm switches off.
3. Raise the main lift by around 1 m with the Up button.
4. Use the threaded sleeves (4) to adjust the cables (5) on all 4 lift columns so that they are evenly tensioned.
5. Secure the 4 threaded sleeves at the top with two M20 lock nut .

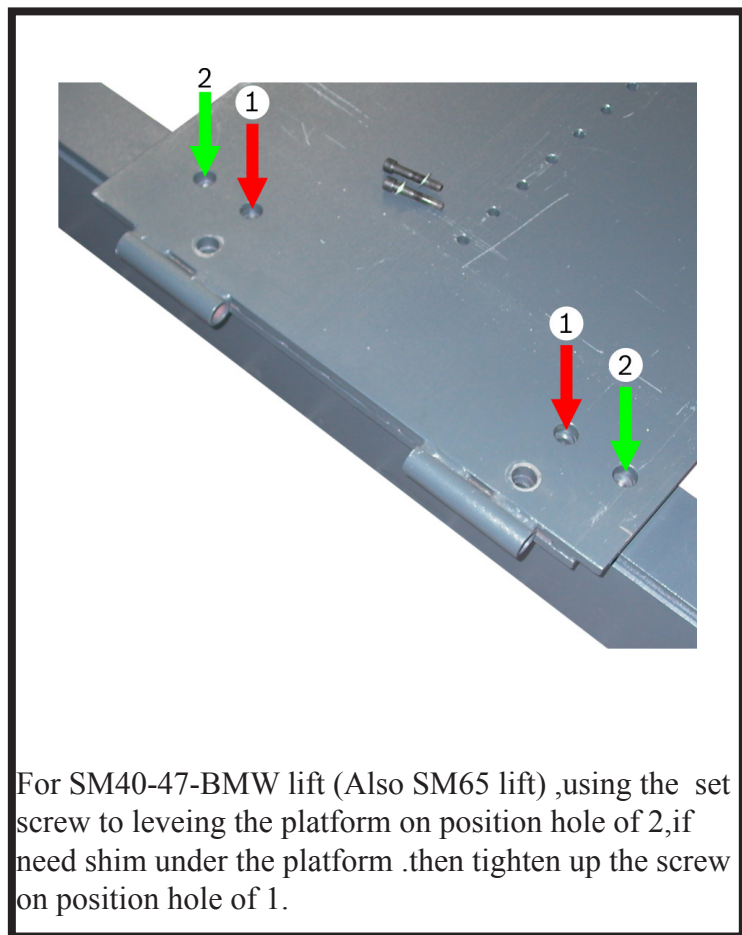

14.Wheel alignment kit AK/FK/CK.. (optional)

14.1 Supplied parts

AK : Wheel alignment Kit for post lift types consisting of

- 1050mm slip plate for SM65(50 mm height)
- 1700mm slip plate for SM40/SM40NB (50 mm height)
- 1800mm slip plate for SM40LT((66 mm height)
- 1050mm slip plate for SM55(75 mm height)
- Fixed /end filler plate
- Moveable filler plate(50mm height)
- Optional: 2 pcs Turning radius gauge(50mm height) for the relevant wheel alignment system (only can sit for 500,450,380,350mm width turn table for alignment lift)

CK: Comfort kit for SM40-47-BMW consisting of

- 1050,450,200,150,150,100,50mm various moveable filler plate(50mm height)
- Optional: 4 pcs Turning radius gauge(50mm height) for the relevant wheel alignment system

FK: Filler kit for SM40/SM40NB/SM65 consisting of

- 1050mm Fixed filler plate
- Fixed /end filler plate(50mm height)
- Moveable filler plate (50mm height)
- Optional: 2 pcs Turning radius gauge(38mm height) and others..

14.2 Assembly


These post lifts can be combined with wheel alignment systems from different manufacturers.

The post lifts must be converted for use. Thus, on each runway the base plate at the front and back must be replaced by filler plates and slip plates from the wheel alignment kit.

On each side: example for AK on SM65/SM55LT

1. Remove the lifting table ramp (only for SM55LT).
2. Put the slip plate cover the runway.
3. Secure the slip plate (use the corresponding M10 bolts and washers).
4. Insert the two locking pins ("A") for each slid plates.


51

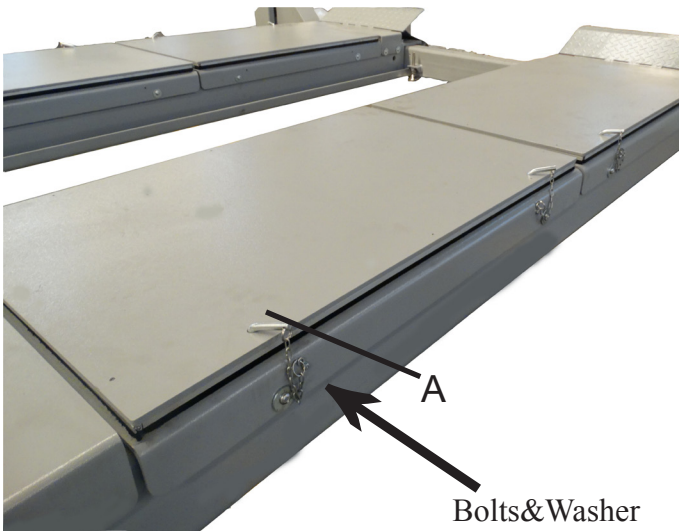

5. Remove the base plate on the drive-off side (automatic ramp chock end).
6. Put the end fixed filler plate in such a way that all bolts protrude from the underside of the runway. Depending on the wheel base, put the moveable filler plate before or behind the turning radius gauge.

52

Two end filler plate install on SM40-47-BMW lift


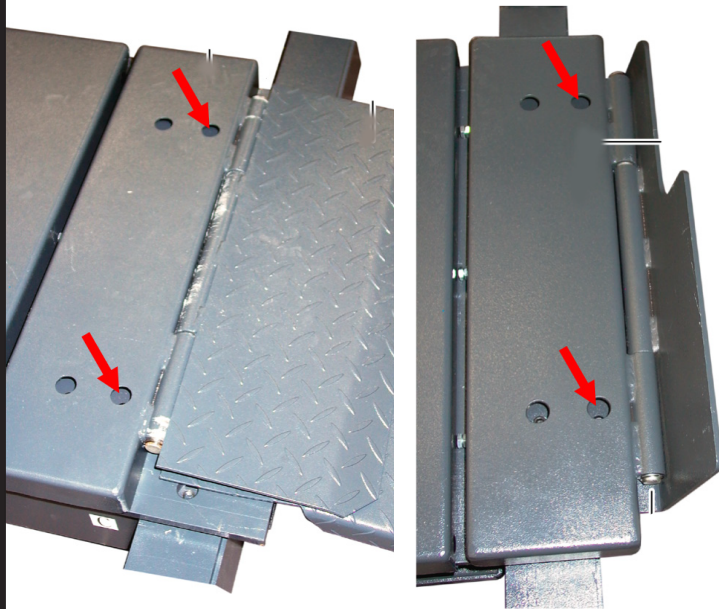


53


Example for AK on SM40LT lift



54

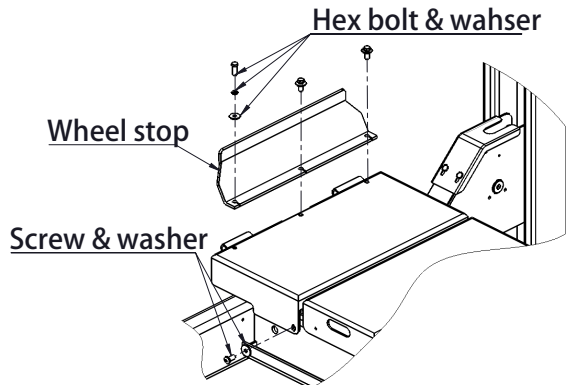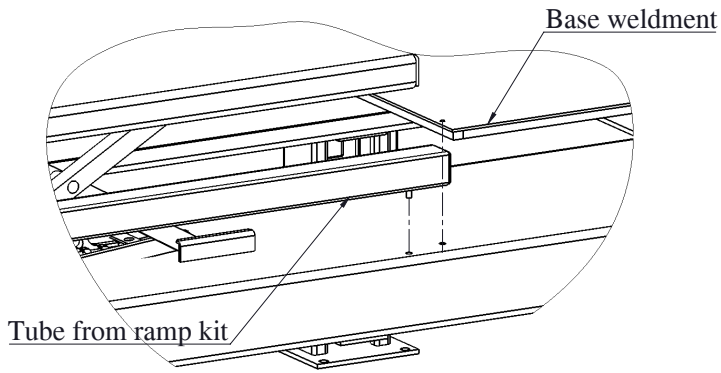


SM55LT Version

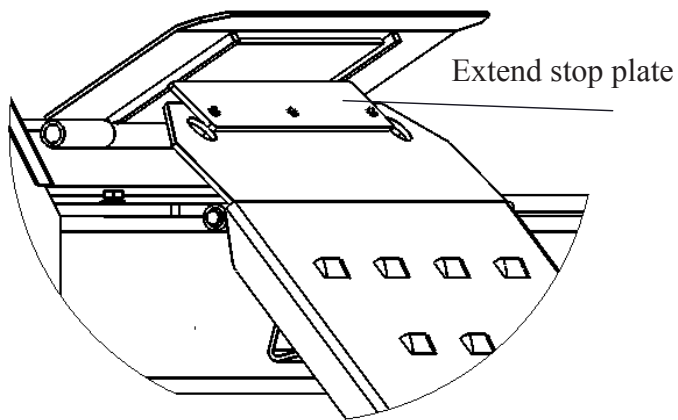


For Alignment kit on SM55LT lift only, using 3 screw M5*12 and spring washer to extend the runway stop.

54.2 Example for FK on SM40 lift

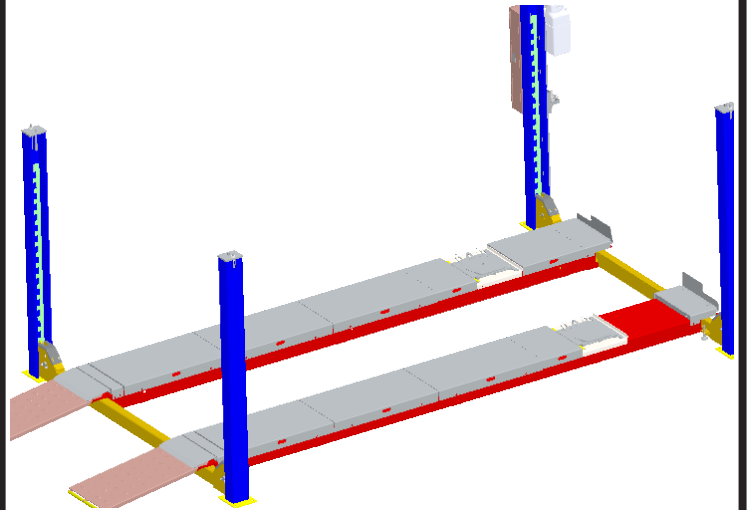


54.3

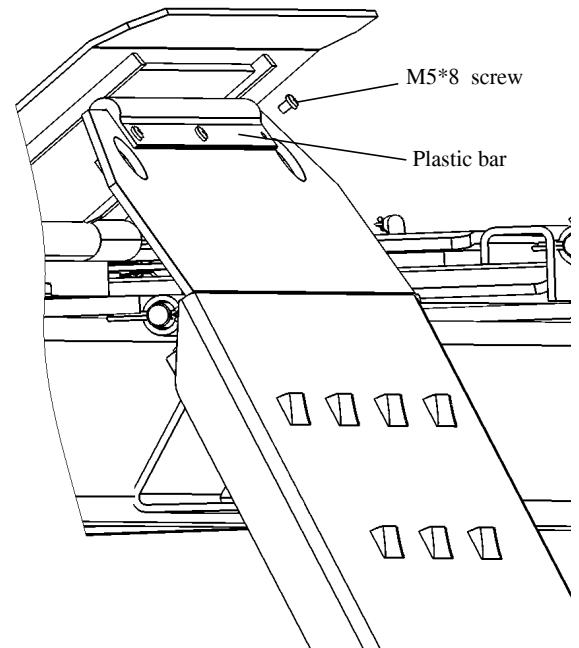


7. Install the yellow plastic bar as the fig 54.3 show with 3-M5*8 screw each ramp for SM40/SM65 series. for SM55LT ,install the extend stop plate as the fig 54 show .

14.3 Adjustment work

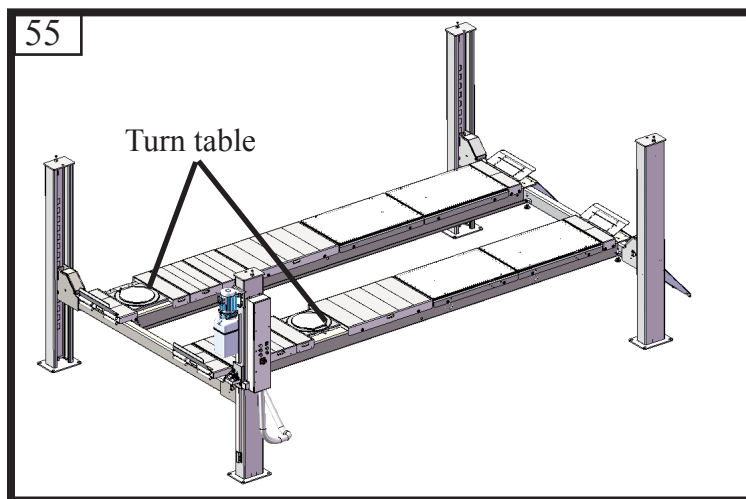

1. To begin making adjustments, first roughly level the runways.
2. To do so, adjust the 4 cables in such a way that the loaded runways of the lift are horizontal both lengthwise and diagonally.

To do this, place a spirit level onto the surface of the runway first lengthwise and then onto the cross beam.

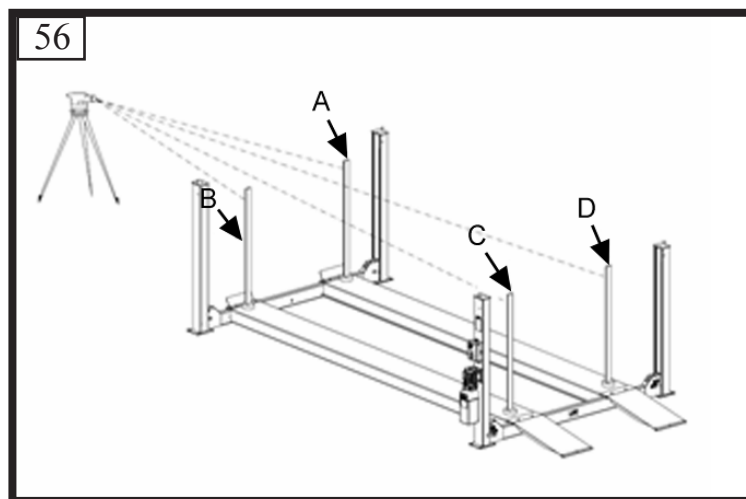

3. Lock the lift into the latch bar.
 4. Adjust the cables with the nuts on the cable end. Then lock the nuts. Make sure that all latches are at the same height.
- Adjust the runways according to the requirements of the vehicle manufacturer. To do so, the following measuring equipment is required:
- Automatic level
 - Measuring stand with scale in mm.
5. Drive the vehicle onto the lift so that the front wheels stand on the turning radius gauge and the rear wheels on the slip plate.

The vehicle must come to a halt virtually centered on the lift in the direction of motion.

6. Loosen the lock pins on the turning radius gauge and slip plates. Make sure that the vehicle can now slip easily on the plates and that no tension exists so that the adjustment work can be carried out precisely.
7. Now lower the lift into the bottom position.
8. Position the automatic level so that the measuring stands can be seen positioned one behind the other on the wheel footprints.
9. For each wheel footprint, note the measurements according to the scale on the measuring stand.
10. Using the 4 cross beam adjustment screws in the "bottom position", (→ Fig. 46) adjust the height so that the readings from all 4 measuring points are the same after they have been checked again.



11. This concludes the initial adjustment work (initial measurement).
12. Then lift the runways when loaded with the vehicle to the desired working height and lower into the four latch bars with the Lock button.
13. Make a note of the 4 measurements of the wheel footprint at this height.
14. Adjust the latch bars. To do so, loosen the jam nuts on the threaded rods and raise or lower the latch bar with the adjusting nut. Make sure that all 4 wheel footprints have the same height reading.
15. Then tighten the jam nuts of the threaded rods again.
16. Archive the measurement report with the updated measurements.

i For your safety, lock the post lift in the 4 latch bars during wheel alignment (locking latch). Only then may work be carried out in the danger zone and only then can wheel alignment be carried out precisely.

15. Disassembly

- Disassembly work may only be carried out by authorized qualified staff.
- Only qualified electricians may work on the electrics.
- Only trained persons with specialist knowledge of hydraulics/pneumatics may work on the hydraulic or pneumatic equipment.

1. To carry out disassembly work, switch off the equipment at the main switch (position OFF).
2. Disconnect the mains fuse and attach a warning sign to prevent reconnection.
3. Switch off the compressor unit (compressor unit manometer to 0 bar) and disconnect the line to the post lift.
4. Disconnect the electricity supply.



WARNING

Risk of fatal injury through incorrect disassembly of hydraulic components. These are pressurized (up to 200 bar).

- Never disassemble hydraulic components (lift cylinders). These should always be detached as a single component.
- The lift cylinder should only be properly disposed of by a certified company.

5. Empty the hydraulic oil tank, drain the hydraulic oil from the hydraulic hoses. Dispose of the hydraulic oil as described in Chapter 16.
6. Remove grease and other chemical substances. Dispose of as described in Chapter 16.
7. Disassemble lift columns, cross beams and runways (→ Chapter 10 and 11).

16. Disposal

16.1 Environmental procedures for disposal

- Prevent environmental hazards.
- Avoid contact with or inhalation of toxic substances such as hydraulic fluid.
- Oils and lubricants are water pollutants under the terms of the Water Management Act WGH. Always dispose of these in an environmentally friendly manner in compliance with the regulations which apply in your country.
- Hydraulic oil-based on mineral oil is a water pollutant and is combustible. Refer to the relevant safety data sheet for disposal.
- Provide suitable oil drain pans and oil absorbents to drain the oil.
- Ensure that no hydraulic oil, lubricants, or cleaning materials contaminate the soil or wash away into the drainage system.



Dispose of used electrical and electronic devices, including cables, accessories and batteries, separately from household waste.

16.2 Packaging

Do not dispose of with domestic waste! The packaging contains some recyclable material which must not be disposed of with domestic waste.

1. Dispose of packaging materials in compliance with local regulations.

16.3 Oils, grease, and other chemical substances

1. When working with oil, grease and other chemical substances, comply with the environmental regulations which apply to the relevant product.
2. Dispose of oil, grease and other chemical substances in compliance with the environmental regulations which apply in your country.





16.4 Metals / Electronic waste

This must always be properly disposed of by a certified company.

Appenddix

Labels

Do not paint over the labels. Replace if damaged or lost

SM40-BQ4		BQ-005	<p>Refer to the full operating manual. The lift may only be operated by authorized staff. The lift must be used for its intended purpose. Do not exceed the load capacity specified on the nameplate. The weight distribution at the front/back may not exceed the value given in the full operating manual. Comply with all Health and Safety regulations. Do not carry persons on the lift. Apply the vehicle handbrake after driving onto the lift and before lifting the vehicle. The main switch is also an emergency stop switch. In case of emergency, turn the switch to "0". Secure the lift against unauthorized use by locking the main switch. Obstacles must be kept out of the moving load and lift area.</p> <p>1. BEFORE LOADING Check that the lift is in full working order. Refer to the Operating and Service Manual. The lift must be fully lowered, there must be no objects, grease, oil, or personnel in the work area or on the runways. Main switch to "ON". Drive the vehicle on centered on the runways (a colleague should help guide the vehicle on).</p> <p>2. LIFTING There must be no-one on the lift or in the vehicle when lifting and lowering. Press the "UP" button. Do not leave parts lying around on the lift. Only continue the lifting process up to the desired height if the vehicle is stable. Do not leave the lift at its full rise for long periods. The lift drops into the locking position by pressing the "DOWN" button. To use the lifting tables (if applicable), turn the selector to the correct position.</p> <p>3. WHEN LIFTING The vehicle doors must be closed when raising and lowering. Monitor the load and the lift when raising and lowering. Do not loiter within range of the moving load and lift when raising and lowering. Do not climb onto the raised vehicle or the lift.</p> <p>4. BEFORE LOWERING THE LIFT Remove obstacles from under the car and lift. Do not loiter within the work area of the lift.</p> <p>5. LOWERING Press the "LOWER" button and lower to the desired height. The lift will automatically raise to clear the locks before lowering. The lift stops when the danger zone is reached. Press the "LOWER in danger zone" button and lower to the lower limit.</p> <p>6. DRIVING OFF The lift must be fully lowered. The drive-on ramp chocks must be fully lowered. Carefully drive the vehicle from the ramps and away from the lift zone.</p> <p>7. SWITCHING OFF When the lift is not in use, turn the main switch to OFF.</p> <p>8. TROUBLESHOOTING AND MAINTENANCE Refer to the Operating and Service Manual.</p>  <p>BQ-005</p>
SM40-BQ8		BQ-006 (SM55LT)	
SM40-BQ7		BQ-034 (SM35LT)	
SM40-BQ6		BQ-007 (SM65, MOT65)	
NP584		BQ-008 (SM40, MOT40)	
		BQ-009 (SM40LT)	<p>TOTAL LIFT CAPACITY 5500 kg MAXIMUM AXLE LOAD 3670 kg</p> <p>TOTAL LIFT CAPACITY 3500 kg MAXIMUM AXLE LOAD 2100 kg</p> <p>Air 6-8 bar</p> <p>CAUTION TO AVOID PERSONAL INJURY PIN PLATES AFTER USE.</p> 
		BQ-012	ROTARY LIFT 
		NP789	 ROTARY LIFT

BlitzRotary GmbH
Hüfinger Straße 55
D-78199 Bräunlingen



Tel +49.771.9233.0
Fax +49.771.9233.99
info@blitzrotary.com
www.blitzrotary.com

USA: +1.812.273.1622 (Headquarter)
Canada: +1.905.812.9920
United Kingdom: +44.178.747.7711
AustralAsia: +60.3.7660.0285

Latin America/Caribbean: +1.812.273.1622
Middle East/Northern Africa: +49.771.9233.0
Southern Africa: 1.812.273.1622
Brazil: +55.11.4534.1995

